

Dongle Local Connect Guideline

The local connect setting function for dongle is designed for the situation where the inverter is set up without a network connection.


The required equipment includes: dongle ,inverter and smart phone.

Follow the steps below to proceed with the setting.


Step 1: Insert the dongle to the inverter and power on the inverter.



Step 2: When the WiFi LED starts blinking, then connect your phone to the dongle hotspot which generally named as dongle SN “B*****”.

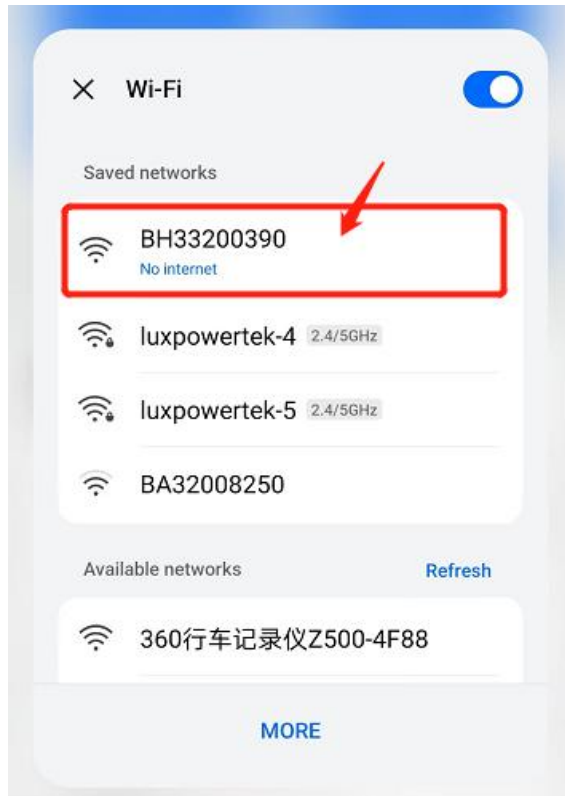


Step 3: Open the Luxpowerview APP, then click the “LOCAL CONNECT” and select “TCP Connect”.(In the IOS version, there is no “Local Connect Type” setting.)

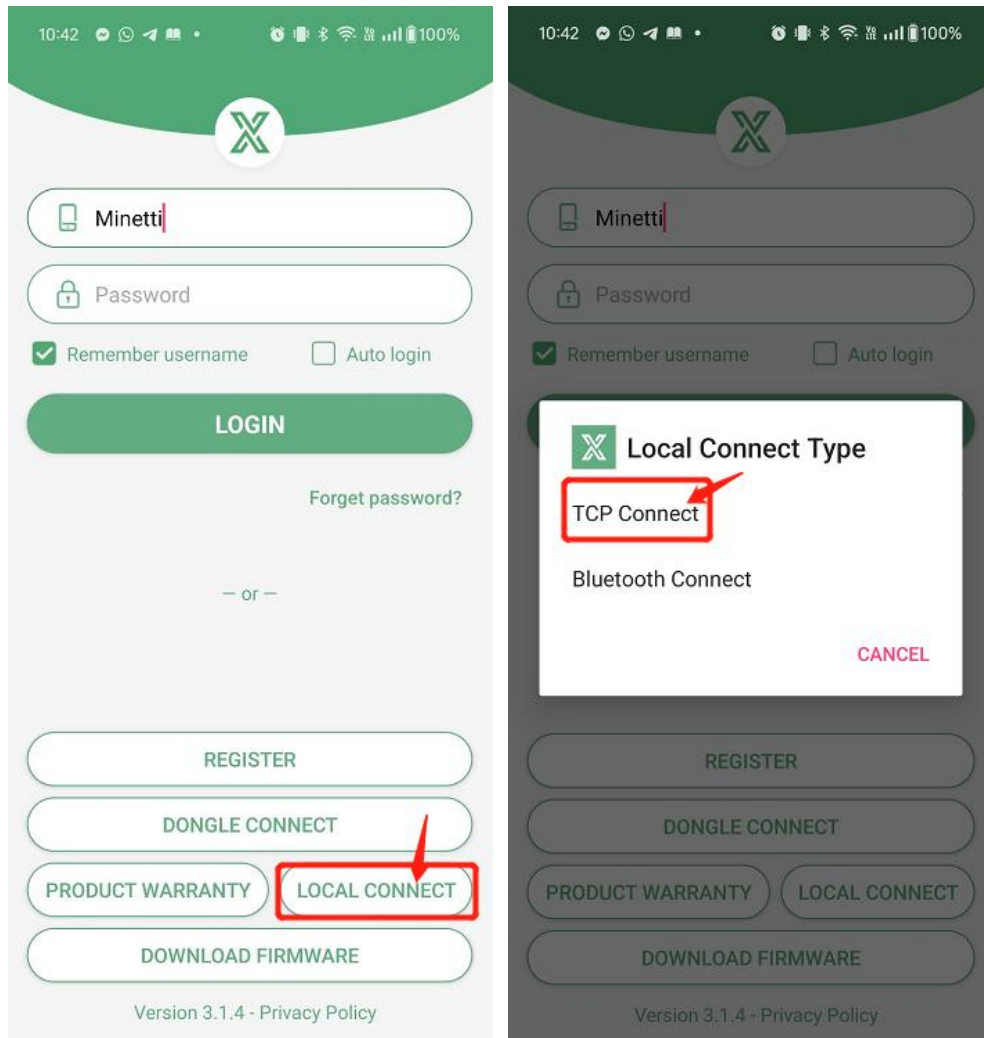

Step 4: Wait for the dongle SN and device SN to appear on the overview page , then set page is available for device configuration.



Step 5: Click the “READ ALL” first before changing the settings.

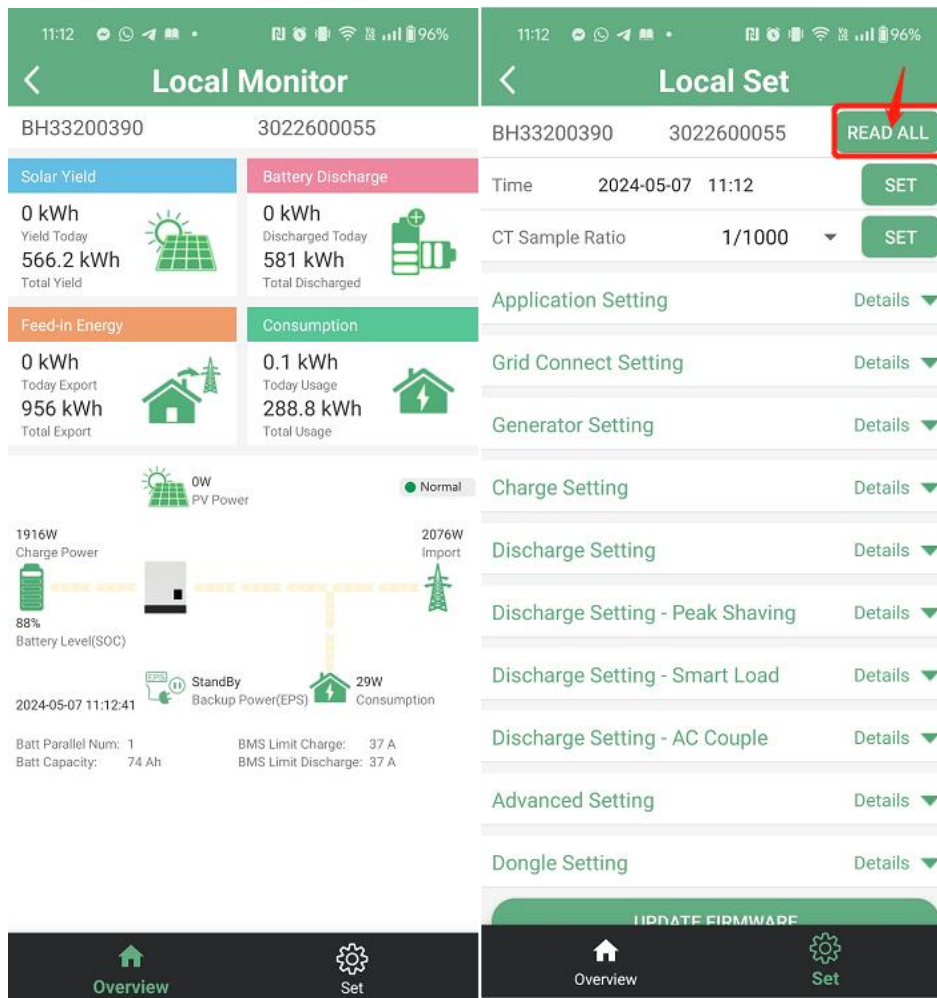

(Overview)

(Set)

Done .