


Off-grid Inverter User Manual

SNA-US 6000

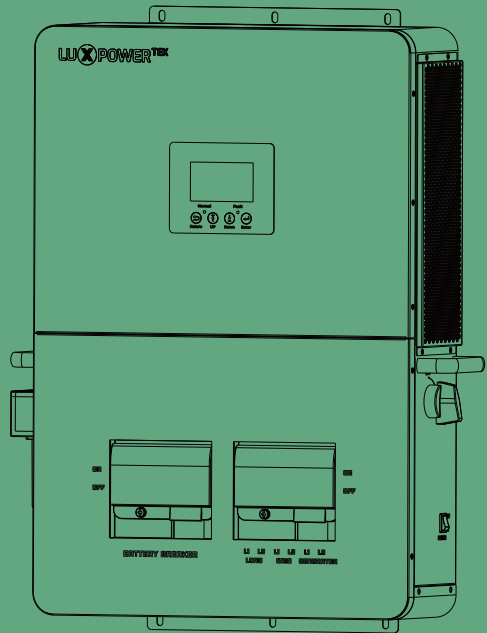

Copyright© 2024 Lux Power Technology Co., Ltd. All Rights Reserved. This manual, protected by the copyright and intellectual property rights of Lux Power Technology, may not be modified, copied, or reproduced without prior written permission. Brands and trademarks mentioned belong to their respective owners. Read carefully for product reliability and warranty eligibility. For warranty details, refer to Lux Power Technology Limited Warranty. Intended for professional service providers; no statements constitute an express or implied warranty.

Descriptions may contain predictive statements; differences may occur. Provided for reference, subject to change without notice by Lux Power Technology.



Website



YouTube



Facebook

 www.luxpowertek.com



Scan to download

CONTENT

Information on this Manual	1
Validity	1
Scope	1
Target Group	1
Safety Instructions	1
1. Brief Introduction	2
1.1 Features of the inverter	2
1.2 Interface of the inverter	3
1.3 Packing list	4
2. Installation	5
2.1 Preparation	5
2.2 Mounting the Unit	8
2.3 Battery Connection	9
2.3.1 Battery Power Cable Connection	9
2.3.2 Lithium Battery Connection	9
2.4 AC Input/Output Connection	10
2.4.1 AC Input/Output Connection for 240V Operation	10
2.4.2 AC Input/Output Connection for 120V Operation	11
2.5 PV Connection	11
2.6 Working with Generator	12
2.6.1 Generator system connection	12
2.6.2 Integrated two-wire Start/Stop	13
2.6.3 Generator AC connection	14
2.6.4 Generator start and stop settings	14
2.6.5 Generator AC connection	15
2.7 System Connection	15
2.7.1 Smart Load Settings	16
2.8 AC Coupling Settings	16

2.9 Parallel function 17

2.10 Power ON/OFF 20

2.11 Rapid Shutdown system Installation (RSD Transmitter) 20

3. Working Modes 21

3.1 Off-grid modes introduction 21

3.2 Working modes related setting description 22

4. LCD Display and settings 24

4.1 LED Display 24

4.2 LCD Display 24

4.3 Inverter Status Display 26

4.4 LCD Settings 27

5. Monitor System for Off-grid 44

6. Specifications 45

7. Trouble Shooting & Error List 49

Revision History

Version	Date	Description
UM-SNAUS01001	2024.07.15	First official release.
UM-SNAUS01001-02	2024.09.13	Added descriptions and settings for GEN interface, including Smart Load and AC Coupling, and updated description for 120V grid-side charging functionality.

Information on this Manual

Validity

This manual is valid for the following devices: SNA-US 6000

Scope

This manual provides the installation, operation and troubleshooting of this unit, please read this manual carefully before installations and operations.

Target Group

For qualified persons and endusers. Qualified persons and end users must have the following skills:

- Knowledge about this unit operation
- Training in deal with the security issues associated with installations and electrical safety
- Training in the installation and commissioning of electrical devices and installations
- Knowledge of the applicable local standards and directives


Safety Instructions

WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

- All the operation and connection need to be operated by qualified persons.
- Before using the unit, read all instructions and cautionary marking on the unit. Any damage caused by inappropriate operation is not warranted by Luxpower.
- All the electrical installation must comply with the local electrical safety standards.
- Do not disassemble the unit. Take it to a qualified service center when service or repair is required, incorrect re-assembly may result in a risk of electric shock or fire. Do not open inverter cover or change any components without Luxpower's authorization, otherwise the warranty commitment for the inverter will be invalid.
- To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning, turning off the unit will not reduce this risk.
- **CAUTION-**To reduce risk of injury, charge only deep-cycle lead-acid type rechargeable batteries and lithium batteries, other types of batteries may burst, causing personal injury and damage.
- **NEVER** charge a frozen battery.
- For optimum operation of this unit, please follow required spec to select appropriate cable size and breaker.
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals, please refer to **INSTALLATION** section of this manual for the details.
- **GROUNDING INSTRUCTIONS** - This unit should be connected to a permanent grounded wiring system, be sure to comply with local requirements and regulation to install this inverter.
- **NEVER** cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.

Brief Introduction


1.1 Features of the inverter

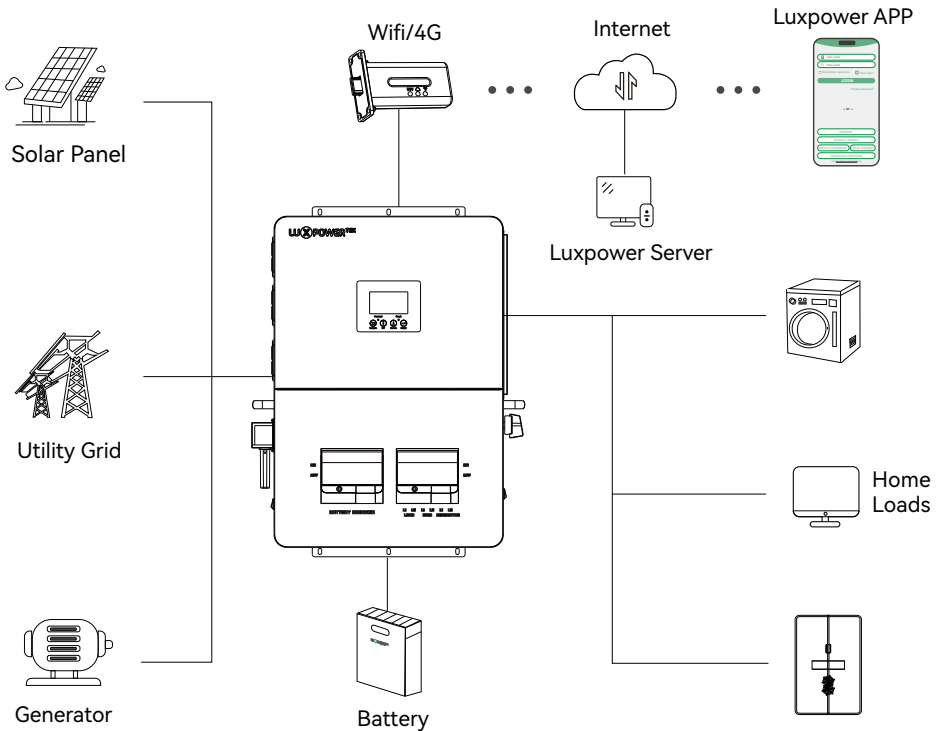

SNA series is a multifunctional, high frequency pure sine wave Off-grid inverter solar inverter, features:


- Applicable for pure off grid inverter/backup power / self-consumption/ on grid situation
- Integrated with 2 MPPT solar charge controllers, MPPT ranges 120V~385V
- Rated power 6KW, power factor 1
- Be able to run with or without battery in ongrid and off-grid mode
- With separated generator input interface, able to control generator remotely
- Solar and utility grid can power loads at the sametime
- With integrated advanced parallel function, up to 16pcs max paralleling
- Support CAN/RS485 for Li-ion battery BMS communication
- WIFI / GPRS remote monitoring, setting and firmware update, support website, free IOS / Android APP

1.2 Interface of the inverter

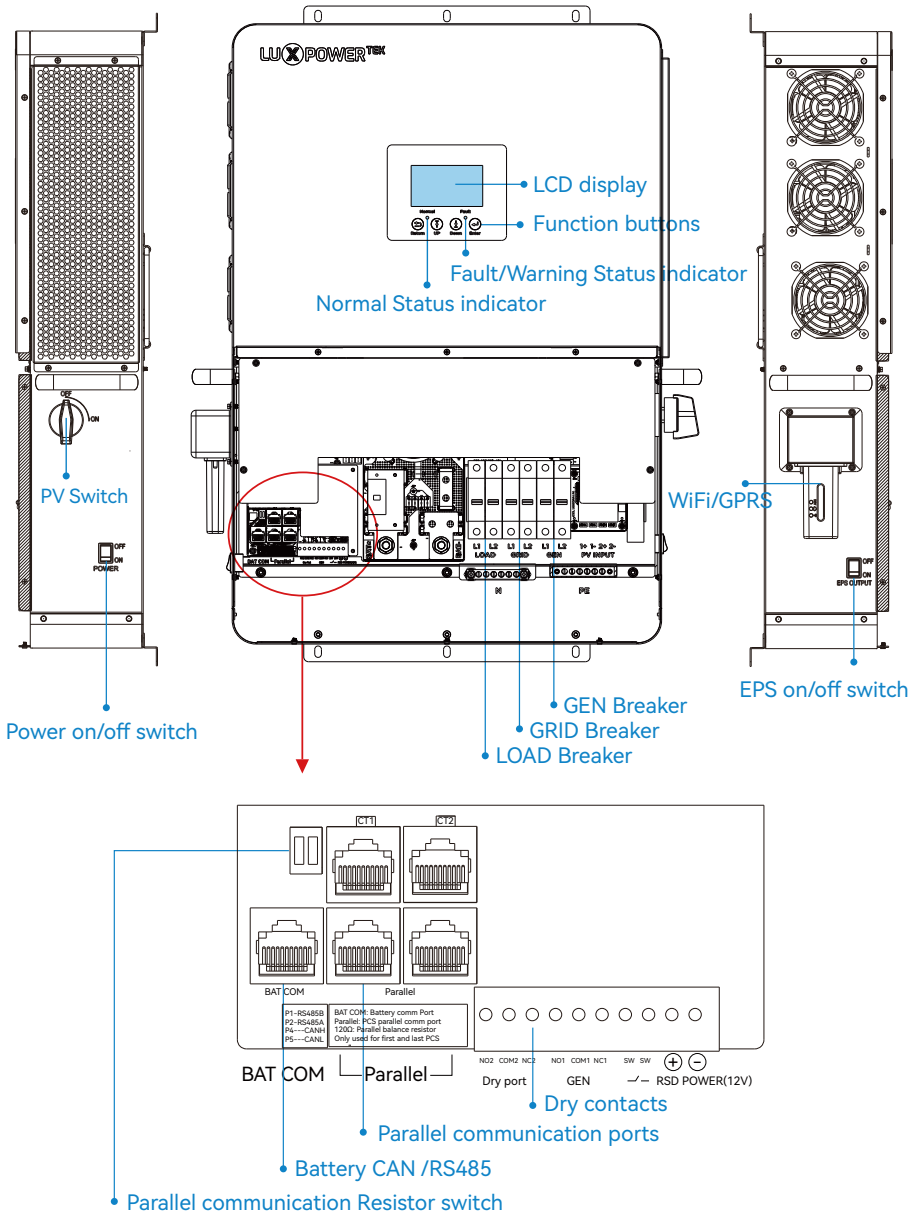

1.3 Packing List

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items in the package:

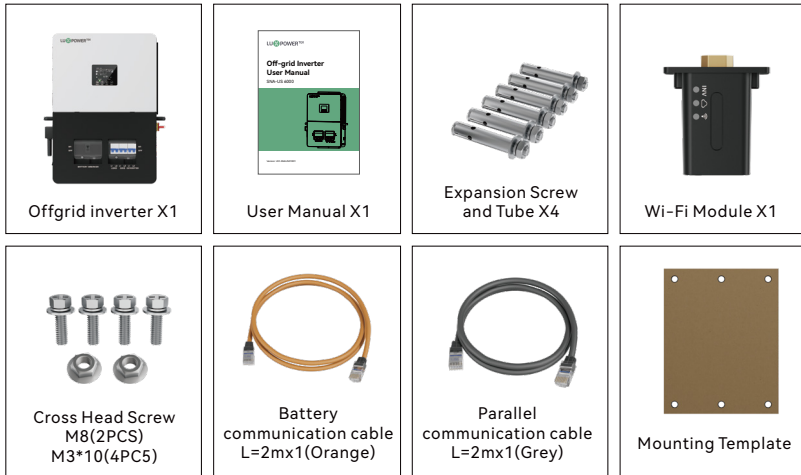


Storing the Inverter

The inverter must be stored appropriately if not installed immediately, refer to below figure.

CAUTION


- The inverter and its components must be stored in its original packaging.
- The storage temperature should be within $-25\sim 60^{\circ}\text{C}$ and humidity within 0~85%.
- The packing should be upright and maximum stacked layers is 6.
- Do not directly exposed the inverter and its packaging to sunshine, raindrops and keep away from corrosion.

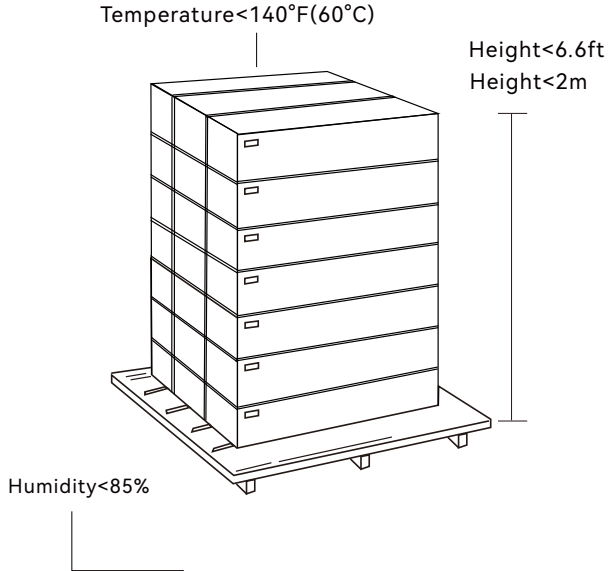

2. Installation

2.1 Preparation

The system connection is as below:

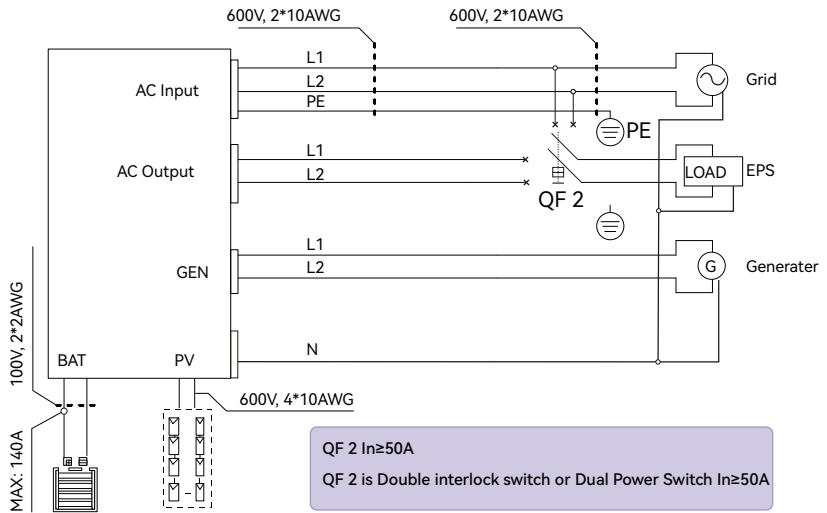

Please prepare the breakers and cables in advanced before installation.

1. Battery connection: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. The recommend battery capacity is 200AH-400AH, the recommended spec of DC breaker is 200A/80V. Recommended battery cable and terminal size:

Model	Maximum Amperage	Battery capacity	Wire Size	Ring Terminal			Torque value
				Cable mm ²	Dimensions		
					d2(mm)	L(mm)	
SNA-US6000	140A	200AH	1AWG	42	6.4	39.2	11~12 Nm


2. AC connection: Please install a separate AC breaker between inverter and AC input power source, inverter and AC output load. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 50A. Recommended AC input/AC output/GEN cable size for each inverter.

Model	Gauge		Cable (mm ²)	Torque value
SNA-US6000	AC INPUT(GRDI side)	6AWG	13	5.1Nm
	AC OUTPUT(EPS side)	6AWG	13	5.1Nm
	GEN INPUT(GEN side)	6AWG	13	5.1Nm

3. **PV Connection:** Please install separately a DC circuit breaker between inverter and PV modules. The recommended of DC breaker is 600V/25A. It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below:

Model	Gauge	Cable (mm ²)
SNA-US6000	10AWG	6

4. Before connecting all wiring, please take off bottom cover by removing 7 screws as shown below.

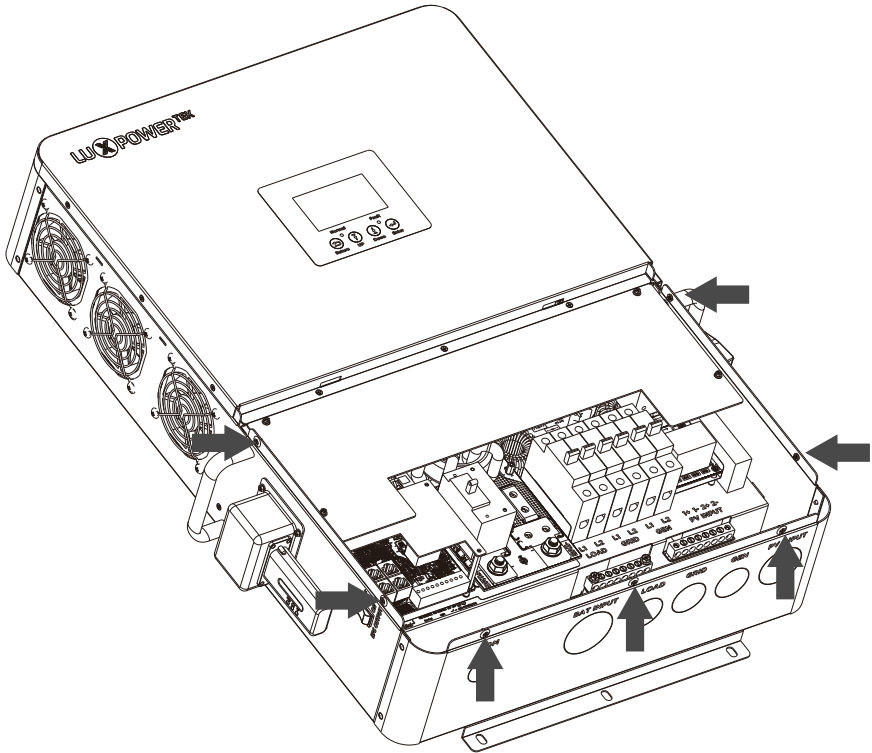

2.2 Mounting the Unit

NOTICE

Consider the following points before selecting where to install:


- Mount on a solid surface
- Do not mount the inverter on flammable construction materials.
- For proper air circulation to dissipate heat, allow a clearance of approx. 20cm to the side and approx. 50 cm above and below the unit.
- The ambient temperature should be between 0°C and 45°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.

Steps to mounting the unit

Step 1. Use the wall-mounting bracket as the template to mark the position of the 4 holes, then drill 8mm holes and make sure the depth of the holes is deeper than 50mm.

Step 2. Install the expansion tubes into the holes and tight them, then use the expansion screws (packaged together with the expansion tubes) to install and fix the wall-mounting bracket on the wall.

Step 3. Install the inverter on the wall-mounting bracket and lock the inverter using the security screws.

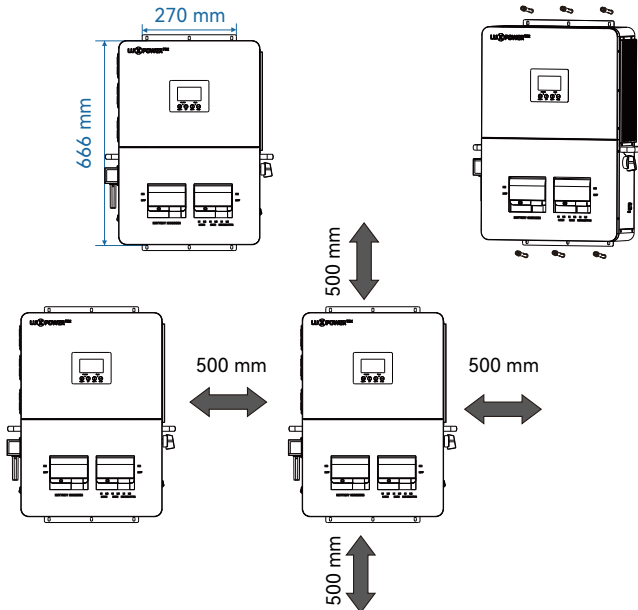

2.3 Battery Connection

2.3.1 Battery Power Cable Connection

Note: for lead acid battery, the recommended charge current is 0.2C (C to battery capacity)


1. Please follow below steps to implement battery connection:
2. Assemble battery ring terminal based on recommended battery cable and terminal size.
3. Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery for SNA-US 6000.
4. Insert the ring terminal of battery cable flatly into battery connector of inverter and make sure the bolts are tightened with torque of 11 ~ 12Nm. Make sure polarity of the battery is correctly connected and ring terminals are tightly screwed to the battery terminals.


2.3.2 Lithium Battery Connection


If choosing lithium battery for SNA-US 6000, please make sure the battery BMS is compatible with inverter. Please check the compatible list in the website.

Please follow below steps to implement lithium battery connection:

1. Connect power cable between inverter and battery
2. Connect the CAN or RS485 communication cable between inverter and battery. If you do not get the communication cable from inverter manufacturer or battery manufacturer, please make the cable according to the PIN definition
3. Lithium battery configuration, in order to communicate with battery BMS, you should set the battery type to “Li-ion” in Program “03” by LCD and choose the right battery brand (for details, please check the LCD setting chapter), users can also choose the battery type and brand by monitor system.

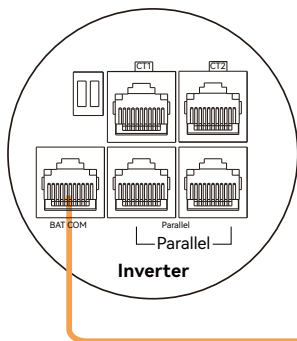

Blue Color Switch 		
Pin	RS 485 port	CAN port
1	RS 485 B	---
2	RS 485 A	---
3	---	---
4	---	CANH
5	---	CANL
6/7/8	---	---

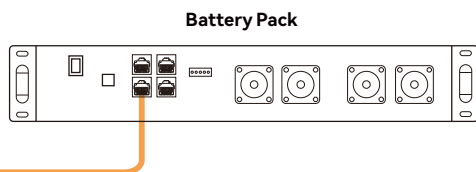

2.4 AC Input/Output Connection

CAUTION


This inverter supports both 240V and 120V connections. Please carefully follow the instructions to ensure safe and proper installation:

- Ensure that you connect the AC wires to the correct terminals. Do not mix input and output connections.
- Always connect the AC wires with the correct polarity. Reversing L and N connections may cause utility short circuits, particularly when the inverters are operating in parallel.

2.4.1 AC Input/Output Connection for 240V Operation

When connecting the inverter in a 240V configuration, all three lines—L1 (black), L2 (red), and N (orange)—must be properly connected to their respective terminals. Follow these steps for safe installation:


1. Turn off the AC breaker and ensure the system is fully powered down before making AC input/output connections.
2. Prepare the AC input/output wires by stripping approximately 10mm (~3/8 in.) of insulation from the wire ends.
3. Connect L1 (black) and L2 (red) to their respective terminals marked as L1 and L2, and connect N (orange) to the neutral terminal.
4. Secure the Ground (Ground) wire (yellow-green) to the PE terminal to ensure proper grounding.
5. Tighten all terminal screws to ensure a secure and reliable connection.
6. This 240V setup allows the inverter to operate at full capacity, supporting both 120V and 240V loads, and providing the maximum efficiency for battery charging.

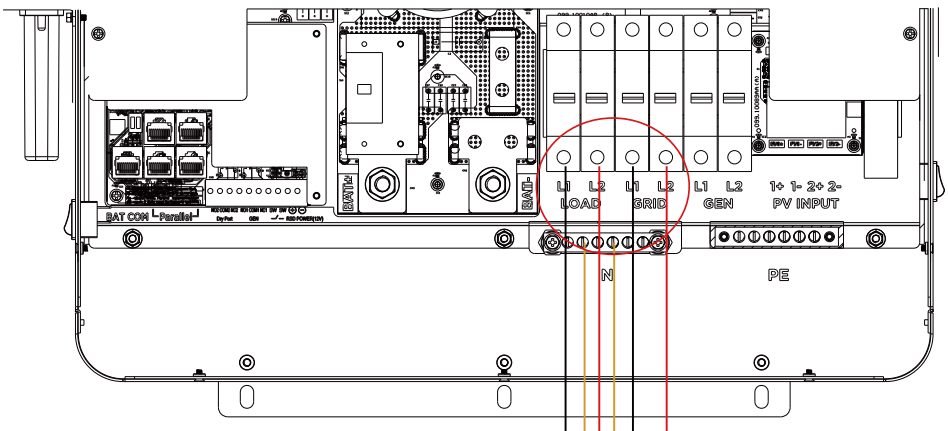

2.4.2 AC Input/Output Connection for 120V Operation

If only **120V power** is available, the inverter can be connected with just **L1 (black)** and **N (orange)**, allowing basic operation and reduced battery charging efficiency. Follow these steps for 120V connection:


1. **Turn off the AC breaker** and ensure the system is powered down before making any connections.
2. **Prepare the AC input/output wires** by stripping approximately 10mm (~3/8 in.) of insulation.
3. **Connect L1 (black)** to the L1 terminal and **N (orange)** to the neutral terminal. Ensure the **PE (Ground)** wire is securely connected to the PE terminal.
4. **Tighten all terminal screws** to prevent any loose connections.
5. In this **120V configuration**, the system will operate at reduced capacity, only supporting 120V loads. Additionally, the battery charging efficiency will be reduced by approximately 50% compared to the 240V configuration.

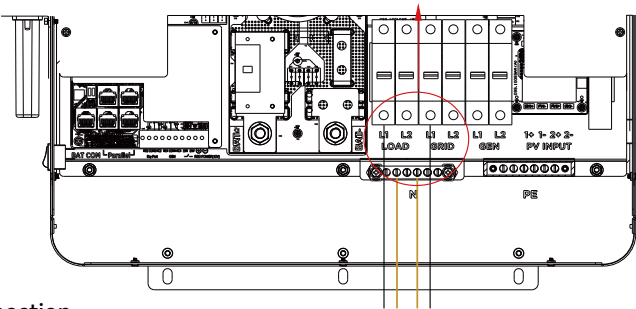

2.5 PV Connection

Please follow below steps to implement PV module connection:


1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Check correct polarity of connection cable from PV modules and PV input connectors.
3. Connect positive pole(+) of connection cable to positive pole(+) of PV input connector. Connect negative pole(-) of connection cable to negative pole (-) of PV input connector.
4. Make sure the wires are securely connected.

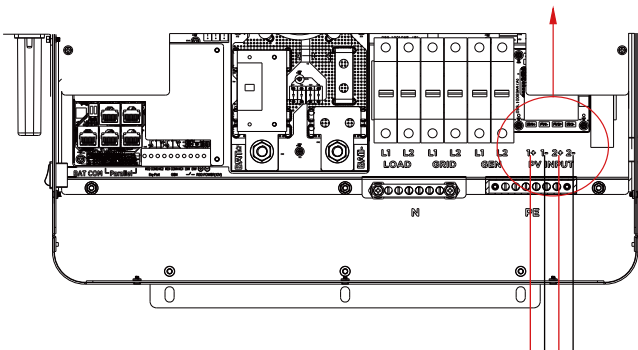

2.6 Working with Generator

L1→LINE (black) L2→LINE(red) N→Neutral (orange)

1. Before making Generator connection, be sure to open DC protector or disconnected first.
2. Remove insulation sleeve 10mm for 2 conductors.
3. Insert L1/L2 and N wires according to polarities indicated on terminal block and tighten the terminal screws.
4. Make sure the wires are securely connected.
5. Finally, after connecting all wiring, please put bottom cover back by screwing two screws as shown below

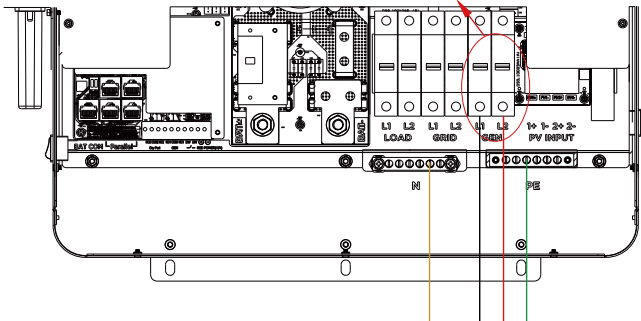

All lux units can work with generator.


- Users can connect the generator output to Off-grid inverters. GEN input terminal.
- The generator will be automatically started when battery voltage is lower than the cut-off value or there is charge request from BMS. When voltage is higher than AC charge setting value, it will stop the generator.
- Battery will get charged when the generator is turned on, and the generator is bypassed to AC output to take all loads .

2.6.1 Generator system connection

The SNA series can use a generator for backup power during grid failures. When selecting a generator, ensure it provides sufficient power and maintains a frequency with a Total Harmonic Distortion (THD) of less than 3%. As a general guideline, the generator should be at least 1.5 times the inverter’s output to accommodate both load powering and battery charging. The table below lists the recommended generator capacities for optimal performance.

Number of inverters in parallel	Generator Capacity
1	>10KW
2	>15KW
3	>20KW
4	25KW

This SNA US 6K product can work with a generator and includes a dedicated Gen port for generator connection.

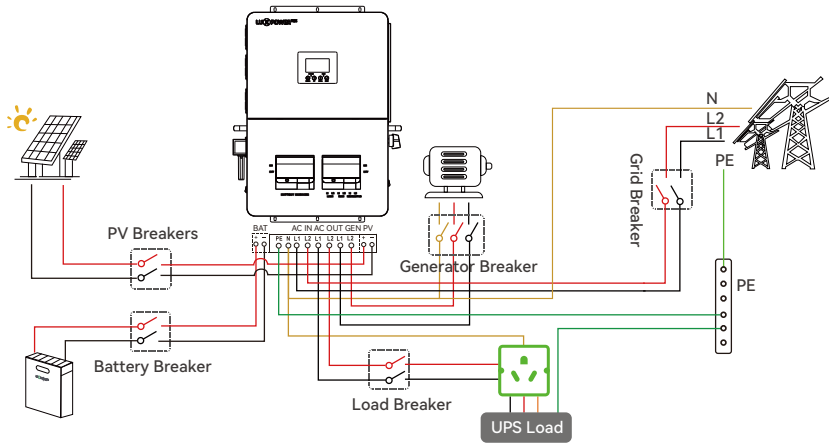

When properly wired and configured, the generator, if compatible with remote start, will start automatically when the battery voltage / SOC is lower than the cut-off value or there is a charge request from the BMS. When the generator is running, it will charge the batteries and excess AC power will be diverted to the AC output (LOAD) to power loads.

2.6.2 Integrated two-wire Start/Stop


The Dry port (NO2, COM2) could be used to deliver signal to external device when battery voltage reaches warning level. The GEN port (NO1, COM1) could be used to wake-up the Generator and then the generator can charge the battery.

Reminder:

Notice: NO---Normal open

Dry Port Relay Maximum Specification: 250VAC 5A

Gen Port Relay Maximum Specification: 250VAC 5A

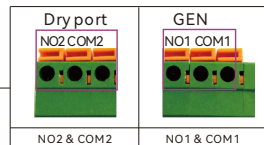

Unit Status	Condition		Dry port NO2 & COM2	GEN NO1 & COM1
Power Off	Inverter is off and no output is powered.		Open	Open
Power On	Without Grid	Battery voltage < Low DC warning voltage	Close	Close
		Battery voltage > Setting value or battery charging reaches floating stage	Open	Open
	With Grid	Battery voltage < Low DC warning voltage	Close	Open
		Battery voltage > Setting value or battery charging reaches floating stage	Open	Open

2.6.3 Generator AC connection


Step 1. Before making any wiring connections, ensure the inverter(s) are powered off, the generator is powered off, and all circuit breakers are open (off) to prevent damage to the unit.

Step 2. Properly identify the generator’s output lines. According to European wiring standards, the

Live (L) wire will be black, Neutral (N) will be blue, and Ground (PE) will be green/yellow. Once identified, strip approximately 10mm (≈3/8 in.) of insulation from the wires.


Step 3. Ground the generator’s output ground to the Ground Bus (labeled PE) of the inverter.

Step 4. Connect the Live (L) wire to the GEN port’s L terminal and the Neutral (N) wire to the GEN port’s N terminal.

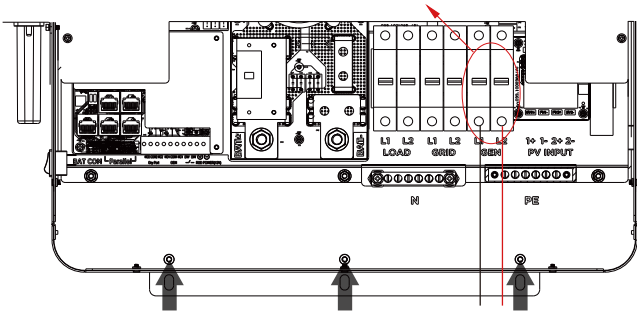

2.6.4 Generator start and stop settings

Using the Luxpower Monitoring platform, navigate to the “Maintenance” page where “Remote Set” will be automatically selected. Scroll to the “Generator” section and select the “Generator Charge Type” (see screenshot below). Typically, lead-acid batteries are charged based on voltage, while lithium batteries are charged based on SOC (State of Charge).

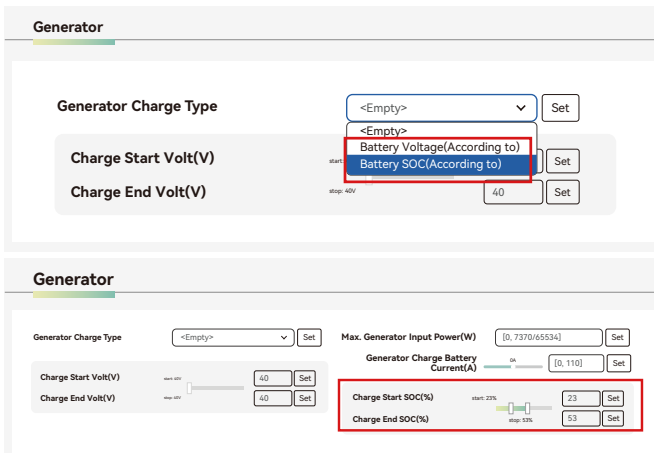

Generator Start Conditions:

The generator will start when utility fails and one of the following conditions is met:

- The battery is discharged to the cut-off setting
- There is a force charge request from the battery
- The battery voltage or SOC is lower than the “Generator Charge Start Battery Volt / SOC” setting


Generator Stop Conditions:

The generator will stop when the battery voltage or SOC is higher than the “Generator Charge End Battery Volt / SOC” settings.

2.6.5 Gen Boost Function


In real applications, customer loads often fluctuate, making generators highly sensitive to frequent changes. Activating GEN Boost can allocate a margin for the generator’s input power, preventing it from consistently operating near overload conditions.

Enable GEN boost

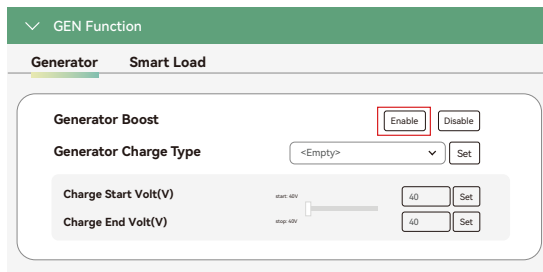


2.7 Smart load Connection

The SNA US 6K’s dedicated generator port can also connect to various smart loads, such as water heaters, in addition to generators.

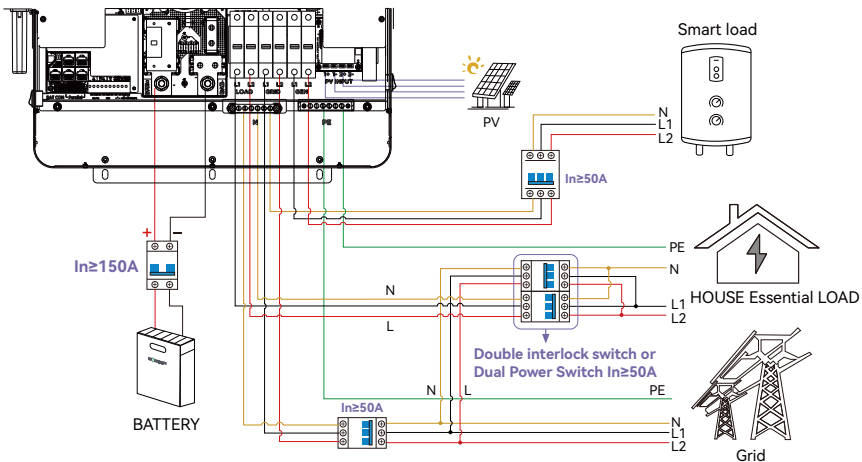

2.7.1 Smart Load Settings

Enable smart load

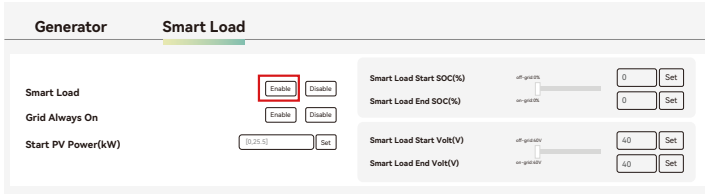

Enable “Grid always on”: When connected to the grid, the smart load remains continuously connected.

Start PV Power: Input the PV power threshold at which you want the smart load to start. You can also input the battery’s SOC or voltage to select when to start and stop.

If your home already has an existing grid-tied system, you can connect it to our generator interface as an AC power input, transforming your grid-tied system into an energy storage system.

 
2.8 AC Coupling Settings

This off-grid model supports **AC Coupling**, allowing integration with existing grid-tied PV systems. **(Please ensure your existing grid-tied inverter has over-frequency load-shedding functionality. If it does not, we recommend that the power of the Luxpower inverter you select does not exceed the power of your grid-tied inverter. For example, if your current grid-tied inverter is 6kW, we suggest you choose a Luxpower inverter with a power rating of less than 6kW.)** This enables seamless integration of solar energy generation with off-grid energy storage systems.

AC Coupling in Off-Grid Mode

Enable the **AC Coupling** feature and configure the SOC (State of Charge) settings for starting and stopping AC Coupling:

- **Start SOC (%)**: The SOC at which the AC-coupled inverters will turn on in off-grid mode (a recommendation is between 50% and 70%).
- **End SOC (%)**: The SOC at which the AC-coupled inverters will shut down in off-grid mode (90% recommended).



Note: It is recommended to keep the Start Volt/SOC and End Volt/SOC within 5%-10% of each other for optimal operation when utilizing the AC coupling function.


2.9 Parallel function

SNA series inverter support up to 16 units to composed single phase parallel system for parallel system setup


Step 1. Cable connection: the system connection is as below:

a. 6kW × 3 Parallel system installation connection (3 @ 240V/120V)


⚠ Cannot share PV input at any time!

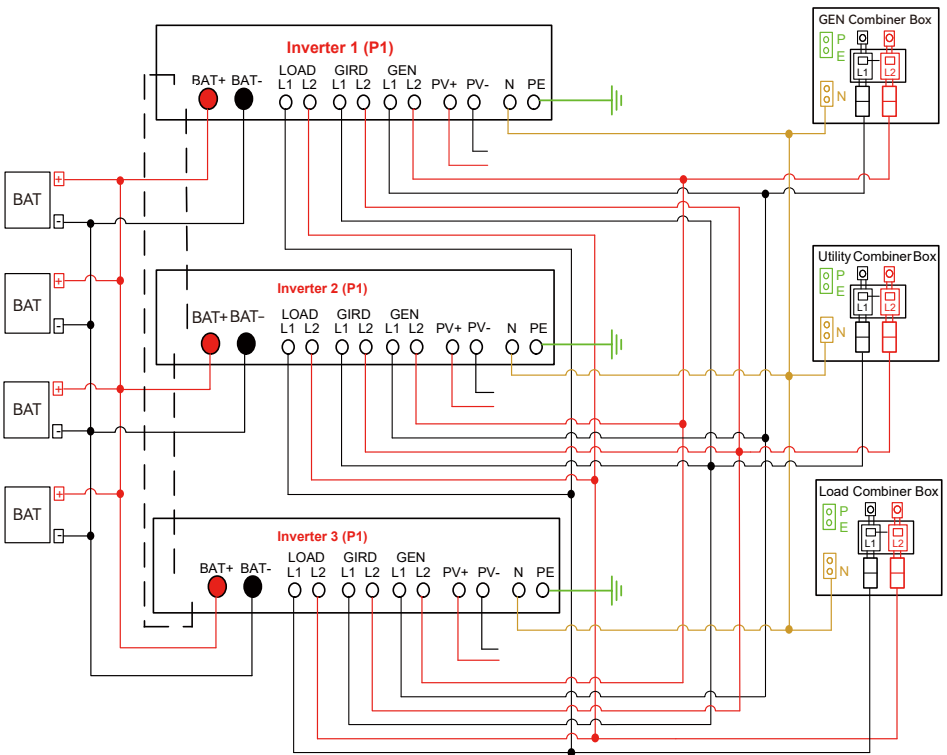

 
b. 6kW x 3 Parallel system installation connection (3 @ 208V/120V)



⚠ Cannot share PV input at any time!

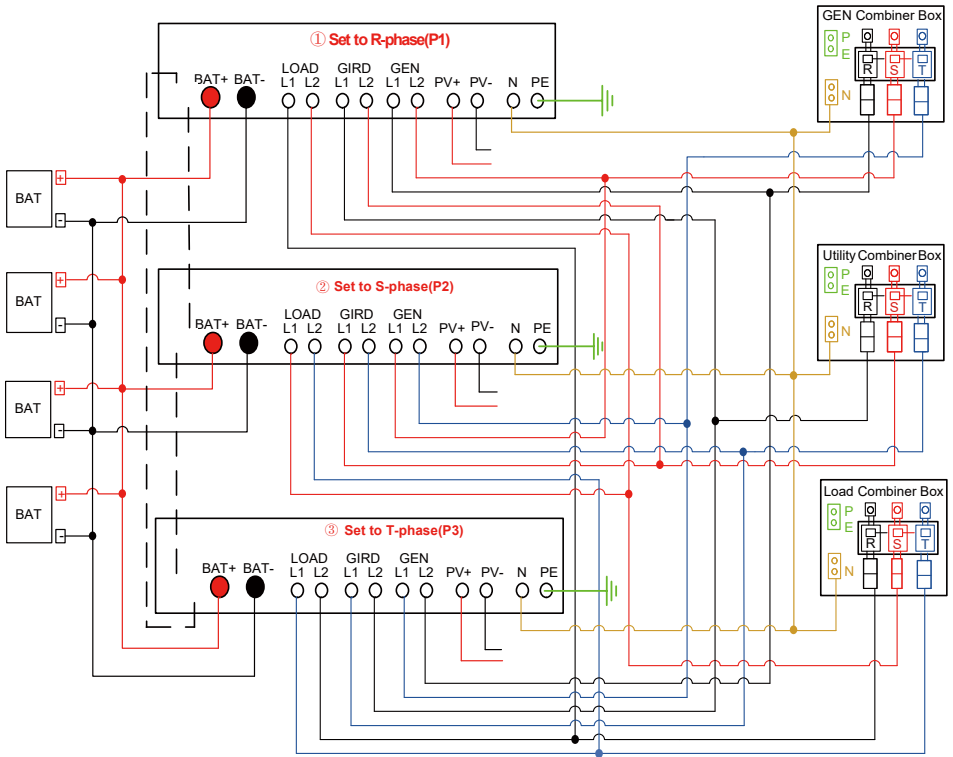

Step 2. Please put the CAN communication PIN to on status for the first and the end inverter

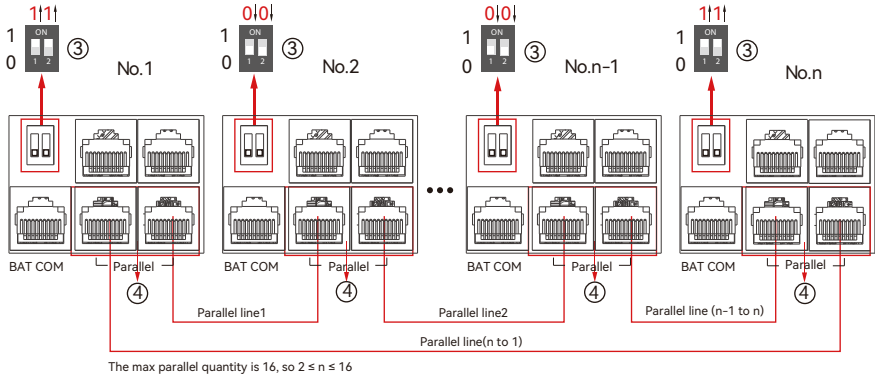

Step 3. Setup the monitor for the system, add all datalogs in one station. Users can login to the visit interface of monitor system, Configuration-> station-> Plant Management-> add datalog to add the datalogs.

Plant name	Installer	End User	Country	Timezone	Daylight saving time	Create date	Action
1 Genesis		Aspergo Install	South Africa	GMT+2	No	2019-03-14	Station Management
2 Butler Home	Elangeni	johnbutler	South Africa	GMT+2	No	2019-03-25	Station Management
3 Office			South Africa	GMT+2	No	2019-06-03	Station Management
4 Cronje Home	Broomhead	cronje	South Africa	GMT+2	No	2019-07-16	Station Management


Step 4. Enable share battery for the system if the system share one battery bank, otherwise disable the shared battery function

Step 5. Set the system as a parallel group in the monitor system

Serial number	Status	Solar Power	Charge Power	Discharge Power	Load	Solar Yield	Battery Dischar	Feed Energy	ConsumptionEr	Station name	Parallel	Action
1 02720110008	Normal	228 W	42 W	0 W	182 W	215.3 kWh	39.6 kWh	0 kWh	551.2 kWh	Dragonview	A-1	Parallel
2 02720110111		35 W	32 W	0 W	0 W	158.7 kWh	21.1 kWh	0 kWh	166.5 kWh	Dragonview	A-2	Parallel
3 02720110112		1 kW	129 W	0 W	1 kW	170.3 kWh	49.9 kWh	0 kWh	434.5 kWh	Dragonview	A-3	Parallel
4 02720110117		79 W	48 W	0 W	106 W	99 kWh	85.6 kWh	0 kWh	257.1 kWh	Dragonview	A-4	Parallel

For more detailed guidance for paralleling system, please visit <https://www.luxpowertek.com/download/> And download the guidance


2.10 Power and EPS ON/OFF

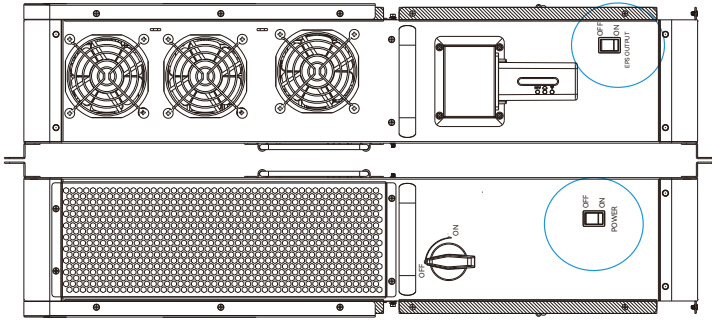

1. Power Switch: Control power supply for the unit
2. EPS Output Switch: Use to control the AC output






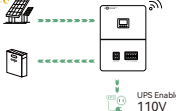


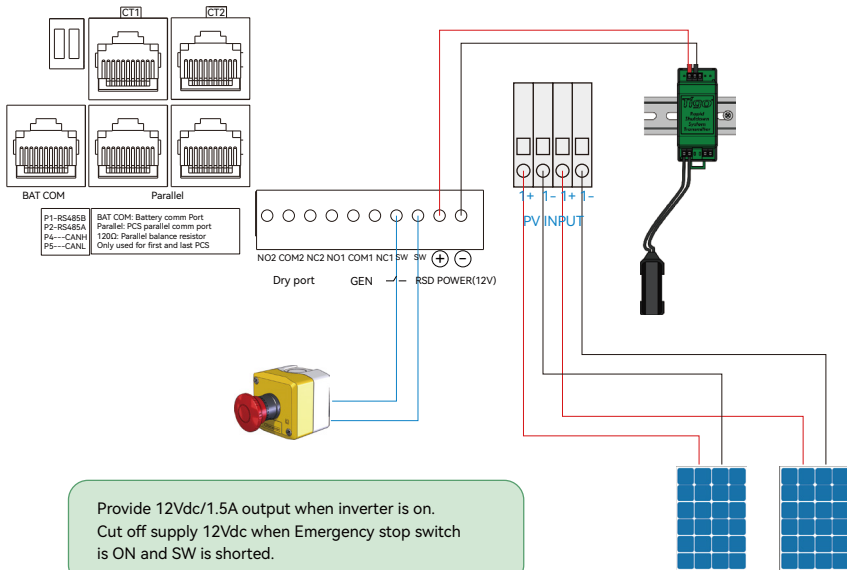
After connection, please turn on both switch. Users can turn off the EPS output switch to turn off power supply in some emergency case

2.11 Rapid Shutdown system Installation (RSD Transmitter)



3. Working modes

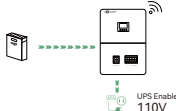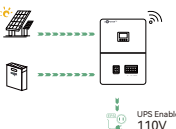3.1 Off-grid inverter modes introduction:
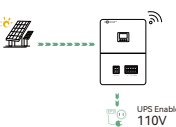
<p>Bypass Mode</p>		<p>AC is used to take the load</p>
<p>PV Charge Bypass</p>		<p>PV charge the battery while the AC power the load</p>
<p>BAT Grid off</p>		<p>Battery is used to take the load</p>
<p>PV+BAT Grid off</p>		<p>PV+Battery power the load together</p>
<p>PV Charge</p>		<ol style="list-style-type: none"> 1. When the EPS key off, the inverter charge the battery only 2. When the battery is power off, the PV can wake up the battery automatically
<p>PV Charge+Grid off</p>		<p>PV charge the battery and power the load</p>
<p>AC Charge</p>		<ol style="list-style-type: none"> 1. AC charge the battery from AC Input or GEN Input 2. When the battery is power off, the AC can wake up the battery automatically
<p>PV+AC charge</p>		<p>PV+AC charge the battery AC is from AC Input or GEN Input</p>
<p>PV Grid off</p>		<p>NOTE: The output power depends on the PV energy input, if the PV energy is unstable, witch will influence the output power</p> <p>When setting without battery, the PV can power the load.</p>

3.2 Working Modes related setting description

Situation	Setting1	Setting2	Working modes and Description
AC abnormal	NA	NA	off grid inverter mode if $P_{Solar} \geq P_{load}$, solar is used to take load and charge battery if $P_{Solar} < P_{load}$, solar and battery take the load together, system will discharge until battery lower than the Cut Off Voltage/SOC
AC normal	In the AC first time	NA	Bypass Mode AC will take the load and Solar is used to charge battery
	Enable AC charge and in the AC charge time	AC charge according to Time	Bypass Mode + AC charge battery Solar is used to charge battery AC will take load and also charge battery during AC charge time if solar power is not enough
		AC charge according to SOC/Battery voltage	Bypass Mode+AC charge battery Solar is used to charge battery AC will take load and also charge battery when battery SOC/Voltage is lower than start SOC/Voltage, and the AC will stop charging when the battery Voltage/SOC is higher than AC end charge battery voltage/SOC
Not in the AC first time and disable AC charge or not in the AC charge time		NA	off grid inverter mode if $P_{Solar} \geq P_{load}$, solar is used to take load and charge battery if $P_{Solar} < P_{load}$, solar and battery take the load together, system will discharge until battery lower than EOD Voltage/SOC

SNA-US 6000 can working as a traditional off grid inverter. In this situation, inverter either use (solar+battery) to take load or use AC take load.

Related settings


1. AC First: During the setting time, system will use AC to take load, use solar power to charge the battery first. If there is extra solar power, extra solar power will take the load. When out of the setting time, system will use solar and battery to take load first until battery voltage / SOC is lower than On Grid EOD settings, then it will use AC to take the load.

2. AC Charge function Disable: The system will not use AC to charge the battery (except Li-ion BMS set force charge flag)

- According to Time: During the setting time, system will use AC to charge the battery until battery full and battery will not discharge during the setting time.
- According to Battery Voltage: During the setting voltage, system will use AC to charge the battery if battery voltage is lower than AC Charge Start Battery Voltage and will stop when Voltage is higher than AC Charge End Battery Voltage.
- According to Battery SOC: During the setting SOC, system will use AC to charge the battery if battery SOC is lower than AC Charge Start Battery SOC and will stop when Voltage is higher than AC Charge End Battery SOC.
- According to Battery Voltage and Time: During the setting time, system will use AC to charge the battery if battery voltage is lower than AC Charge Start Battery Voltage and will stop when Voltage is higher than AC Charge End Battery Voltage. And battery will not discharge during the setting time.
- According to Battery SOC and Time: During the setting time, system will use AC to charge the battery if battery SOC is lower than AC Charge Start Battery SOC and will stop when Voltage is higher than AC Charge End Battery SOC. And battery will not discharge during the setting time.


4. LCD display and settings

4.1 LED Display

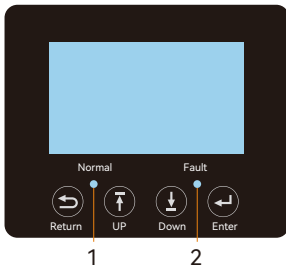







LED Indicator			Messages
1	Green	Solid On	Working normal
		Flashing	Normal
2	Red	Flashing	Fault condition occurs inthe inverter

4.2 LCD Display

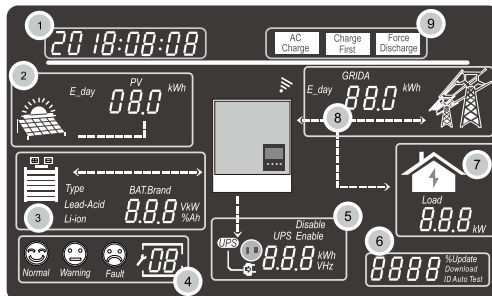







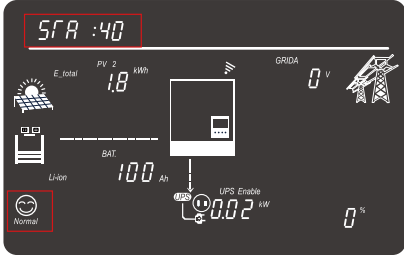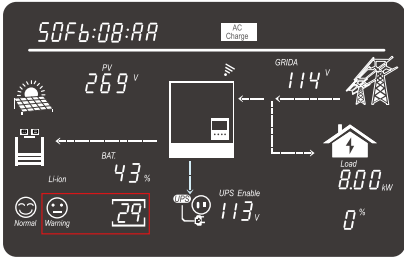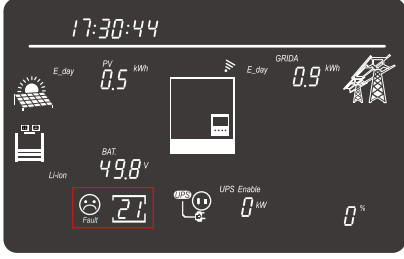
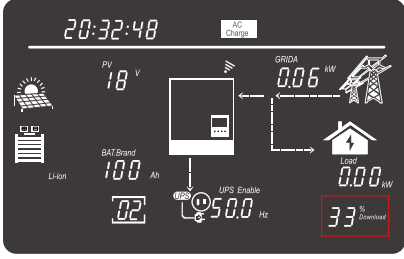
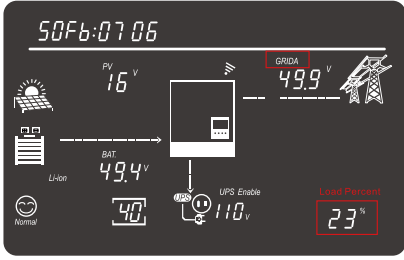
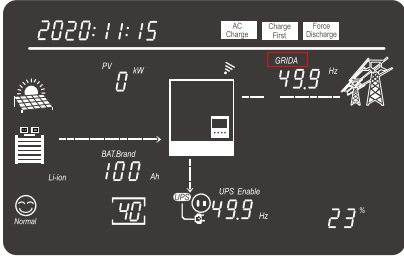




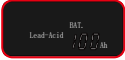

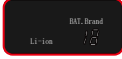
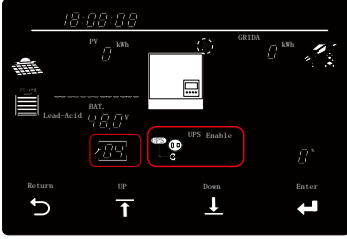





No.	Description	Remarks
1	Generally Information Display Area	Display the currently time/date by default (year/month/day/hour/minute" switching automatically). When press Up or Down buttons, this area will display the firmware version information, serial number etc. Display the setting selection information when entering settings
2	On-grid solar inverter output power and energy data	This area shows the data of PV voltage, power and the setting of PV input connection information
3	Battery information and data	This area shows the battery type, battery brand(lithium battery), the lead-Acid battery setting of CV voltage, Floating charging voltage, Cut off voltage, Discharge end voltage. And display the voltage, SOC and power in turns of period of 1 seconds
4	System working status / setting code	There are three type of working status-normal, warning and fault, in right side of this area, there are code display, it will display different type of code-the system working mode code, warning code, fault code and setting code
5	UPS/EPS output information and data	When UPS function is enabled, this area will display UPS voltage, frequency, power etc. in turns of periods of 1s
6	Programming & the percentage of AC output power	When firmware updating in process, it will display relevant information When in grid off, this area will display the Percentage of the maximum AC output power
7	Loads consumption	Display the power consumption by the loads in on grid model
8	Grid information and Generator information	Display the grid (GRIDA) information of voltage, frequency, input or output power, the Generator (GRIDB) information of voltage, frequency, input power, switch period of 1s
9	Working mode settings area	When make settings on the SNA-US 6000 inverter through the LCD, this area will display the AC Charge, Charge First option for setting on those working modes. It will not display those information unless in the setting process.





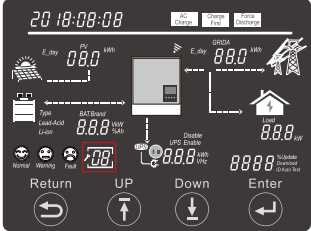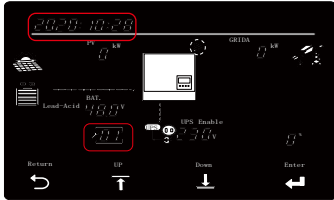

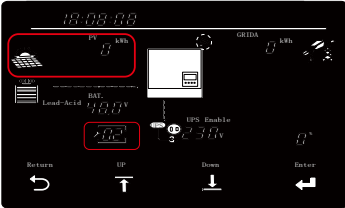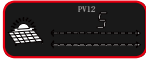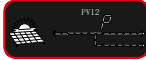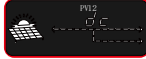4.3 Inverter Status Display

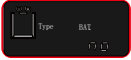

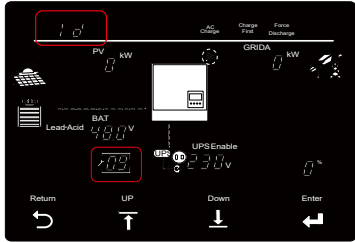
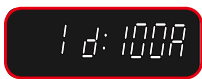
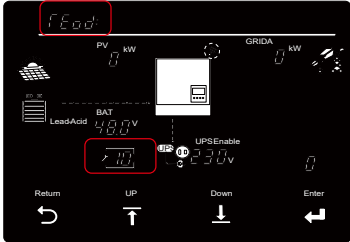

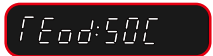
<p>Normal status, running status 40</p> 	<p>Warning status, warning 29</p> 
<p>Fault status, fault 21</p> 	<p>Flash status: download percentis 33%</p> 
<p>When display 'GRIDA', it means the Grid information is about AC utility, The percent display on the right down corner means the load percentage</p>	
	<p>When display 'GRIDB', it means the AC information is about Genset input</p> 

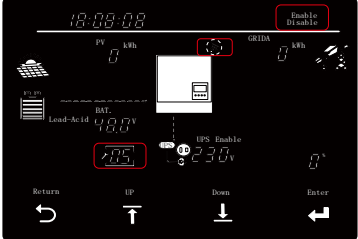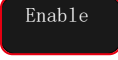
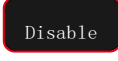


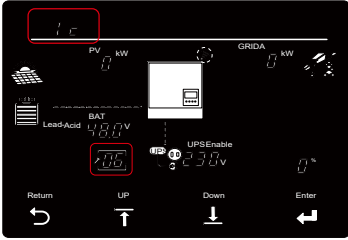
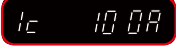

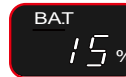
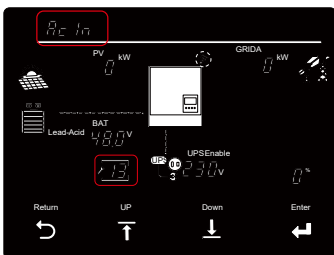


4.4 LCD Settings





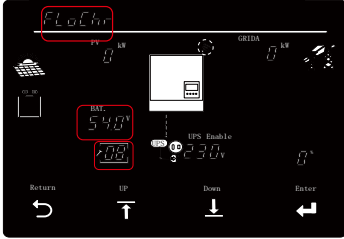

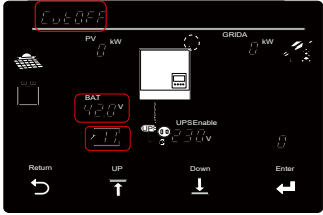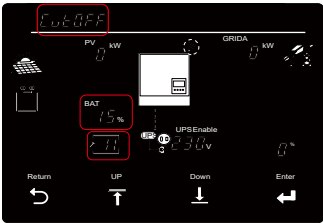
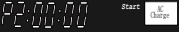

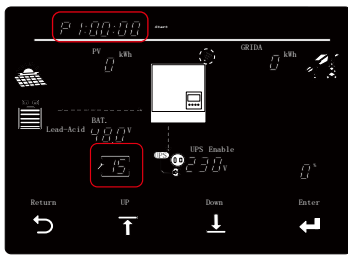

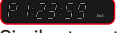
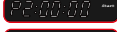
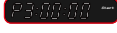
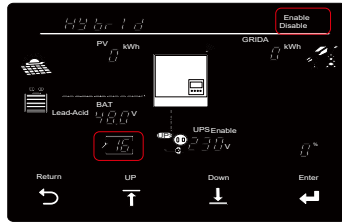

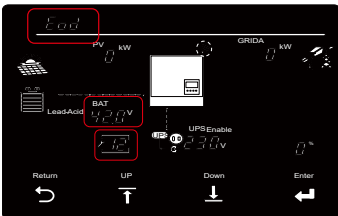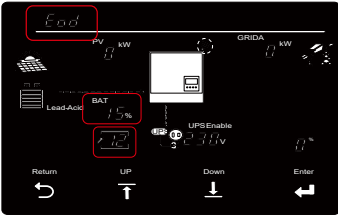
<p style="text-align: center;">Return UP Down Enter</p> <p>There are four buttons on the LCD.</p> <div style="display: flex; justify-content: center; gap: 20px;">     </div>		
<p>Step for setting by the display:</p> <p>Step 1: After touch Enter button for about 2 seconds, the unit will enter setting mode. The setting icon and index will flashing.</p> <p>Step 2: Touch UP or Down button to select setting index form 1 to 19.</p> <p>Step 3: Then touch Enter button to set this item</p> <p>Step 4: Touch UP or Down button to change the settings</p> <p>Step 5: Touch Enter to confirm the setting or Return the setting list is as below.</p> <div style="text-align: right;">  </div>		
Index	Description	Setting Option
01	Date & time	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Setting Year / Month / day</p>  <p>Setting hour / minute / second</p>  </div> </div>
02	PV input mode	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Default: S S: two independent Strings input</p>  <p>P: Same string input for 2 MPPTs</p>  <p>dc: DC source input</p>  </div> </div>

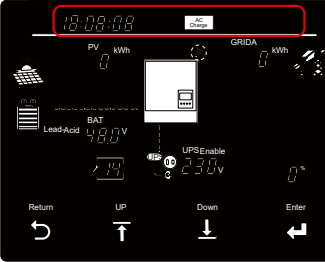
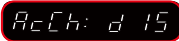



<p>03</p>	<p>Battery</p>	<p>Run with No Battery: Step 1: Choose battery type first, when no flashing, select Enter to choose Run with No battery</p> 
		<p>For Lead Acid: Step 1: Choose battery type first, when Lead-Acid flashing, select Enter to choose Lead-acid battery Step2: Then choose battery capacity</p>  
		<p>For Lithium battery Step 1: Choose battery type first, when Li-ion flashing, select Enter to choose Li-ion battery Step 2: Choose battery brand 0-> Standard Battery 2-> Pylon Battery 6-> Luxpower protocol Battery 8-> Dyness Battery</p>  
<p>04</p>	<p>Off grid Output voltage and frequency</p>	 <p>AC Output voltage 200Vac/208Vac/220Vac/ 230Vac(Default)/240Vac</p>  <p>AC Output frequency 50Hz (Default)/60Hz</p> 
<p>05</p>	<p>Buzzer enable</p>	 <p>Buzzer enable (Default)</p>  <p>Buzzer Disable</p> 






<p>06</p>	<p>Ic: Maximum charge current</p>	<div style="display: flex; justify-content: space-between;"> <div style="width: 60%;">  </div> <div style="width: 35%;"> <p>Total charge current (Iac+Ipv) setting Setting range: 0A~140A Default: 110A</p>  <p>AC charge current setting: Setting range: 0A~140A Default: 30A</p>  <p>Generator charge current setting: Setting range: 0A~60A Default: 30A</p>  </div> </div>
<p>07</p>	<p>ConChr: CV voltage setting (Only in Lead-acid battery type)</p>	<div style="display: flex; justify-content: space-between;"> <div style="width: 60%;">  </div> <div style="width: 35%;"> <p>Setting range: 50.0-59.0Vdc Default: 56.4V</p>  </div> </div>




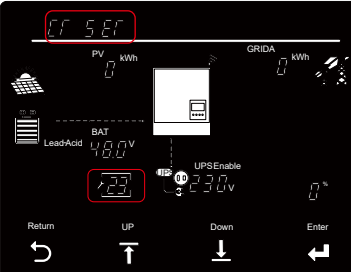

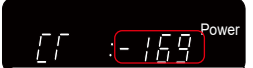
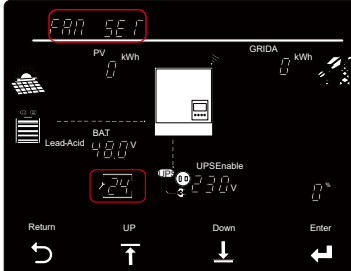


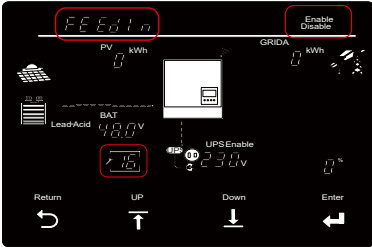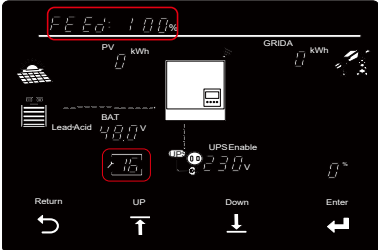

<p>08</p>	<p>FloChr: Floating charging voltage setting (Only in Lead-acid battery type)</p>		<p>Setting range: 50.0~59.0Vdc Default: 54.0V</p> 
<p>09</p>	<p>Id: Maximum discharge current</p>		<p>Total discharge current setting Setting range: 0A~140A Default: 110A</p> 
<p>10</p>	<p>TEOd: Discharge control type: VOLT / SOC</p>		<p>Setting Range: VOLT / SOC</p>  
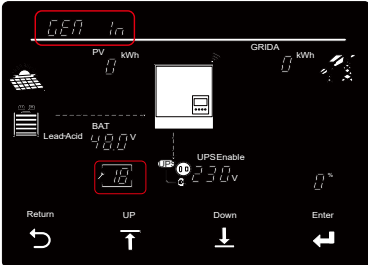
<p>11</p>	<p>CutOff: Cut off Voltage or SOC, depend on TEOD</p>	 	<p>Setting range: VOLT: 40.0-OnGrid EOD Volt Default:42V</p>  <p>SOC: 0-OnGrid EOD SOC Default: 15%</p> 
<p>12</p>	<p>Eod: Discharge end voltage or soc with grid, depend on TEOD</p>	 	<p>Setting range: VOLT: Cut off Volt-56V Default: 42V</p>  <p>SOC: Cut off SOC-90 Default: 15%</p> 
<p>13</p>	<p>AcIn: AC voltage range setting</p>		<p>Unity AC Input voltage range: 90Vac~280Vac</p>  <p>Unity AC Input voltage range: 170Vac~280Vac</p> 

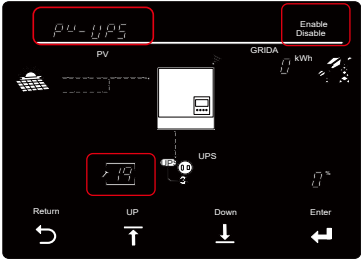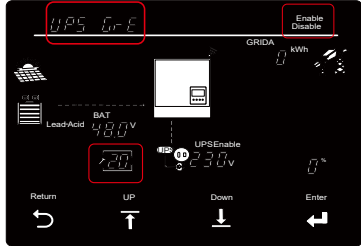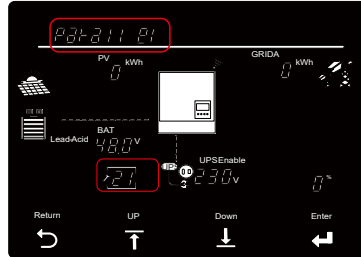
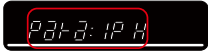


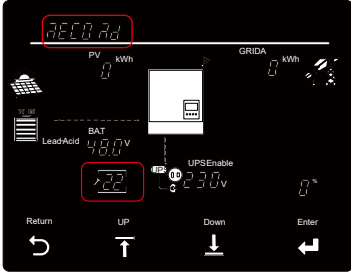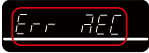
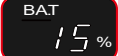

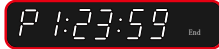

	<p>AC charge setting (The setting process must select the AC charging function, confirm the charge control battery voltage or SOC value, and set the confirmation time period 1, 2, 3 to truly complete the AC charging function setting)</p>		<p>AC Charge function: Setting range: 1. DIS: AC charge disable; 2. TIM: According to time; 3. VOL: According to battery voltage; 4. SOC: According to battery soc; (Touch “Enter” button to set ac charge parameter)</p> 
<p>14</p>	<p>AC charge control: Setting range: Vol: 1. Start Voltage: 38.4~52V; 2. End Voltage: 48~59V; SOC: 1. Start Soc: 1~90%; 2. End Soc: 20~100%;</p>   	<p>Setting AC Charge time of 1 start: Range: 00:00~23:59 Default: 00:00~00:00</p>  <p>Setting AC Charge time of 1 end: Range: 00:00~23:59 Default: 00:00~00:00</p>  <p>Similar to set time2 and times</p>  	
<p>15</p>	<p>Utility source (AC Input) to take Load time setting</p>		<p>Setting time of 1 start: Range: 00:00~23:59 Default: 00:00~00:00</p>  <p>Setting time of 1 end: Range: 00:00~23:59 Default: 00:00~00:00</p>  <p>Similar to set time2 and time3</p>  
<p>16</p>	<p>Hybrid enable / disable</p>		<p>Setting Range: Hybrid Disable (default)</p>  <p>Hybrid Enable</p> 




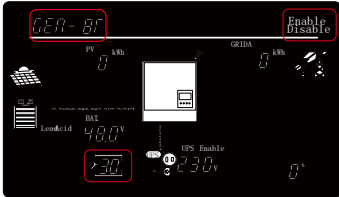
	<p>Feed-In Enable / disable (Only valid when Hybrid is enabled)</p>		<p>Setting Range: Feed-In Disable (default)</p> <p>Enable</p> <p>Feed-In Enable</p> <p>Disable</p>
<p>16</p>	<p>Maximum Feed-In percent Only valid when Feed-In is enabled Power percent can be set larger than 100% in case of there is other generating device in the system</p>		<p>Setting Range: 0-100% 0% (default)</p> <p>FEED: 100</p>
<p>17</p>	<p>Battery Wakeup Enable / disable (Not for No Battery type)</p>	 	<p>Enable wakeup battery</p>
<p>18</p>	<p>Max Generator Input Power</p>		<p>Setting Range:0-7370W 7370W (default)</p> <p>GEN :7369Power</p>





<p>19</p>	<p>PV Off Grid enable / disable</p>		<p>Setting Range: PV Off Grid Enable (default)</p> <p>Enable</p> <p>PV Off Grid Disable</p> <p>Disable</p>
<p>20</p>	<p>Power Save Function enable / disable</p>		<p>Setting Range: Green Function Disable (default)</p> <p>Green Function Enable:</p> <p>Enable</p> <p>Disable</p> <p>Setting Range: ECO Mode Disable (default)</p> <p>ECO Mode Enable:</p> <p>Enable</p> <p>Disable</p>
<p>21</p>	<p>Parallel setting</p>		<p>Parallel type setting Setting Range: NoPL (not Parallel) / 1PH (Single phase) / 3PH (Three phase) NoPL (default)</p>  <p>Bat Share enable / disable Setting Range: Disable (default) Enable</p> 



<p>22</p>	<p>Error / Alarm Record</p>		<p>Error Record ->Record Index ->>Record Msg: (Year: Month: Day; Hour: Min:Sec; Error code)</p>  <p>Alarm Record ->Record Index ->>Record Msg: (Year: Month:Day; Hour: Min: Sec; Alarm code)</p> 
<p>23</p>	<p>CT Setting</p>		<p>External Grid CT (Latest Version Only) Setting Range: Disable (default) / Enable</p>  <p>Internal CT Offset Setting Range: -200~200W 20W (default)</p> 
<p>24</p>	<p>Fan speed setting</p>		<p>Fan1 Speed Percent Setting Range: 20~100% 70% (default)</p>  <p>Fan1 Speed New Slope Setting Range: Disable (default)/ Enable</p>  <p>Fan2 Speed Percent Setting Range: 20~100% 70% (default)</p>  <p>Fan2 Speed New Slope Setting Range: Disable (default)/ Enable</p> 



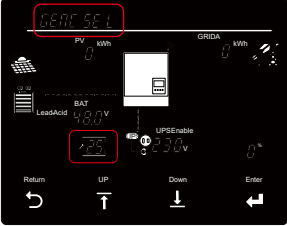
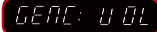
Connect




<p>25</p>	<p>Generator charge setting</p>	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;">  <p>->control type ->>control value Setting Range: VOL : 1. Start Voltage: 38.4-52V; 2. End Voltage: 48-59V; SOC: 1. Start Soc: 1-90%; 2. End Soc: 20-100%;</p> </div> <div style="width: 50%;"> <p>Generator charge setting ->charge control type Setting Range: 1. VOL (default) 2. SOC</p>      </div> </div> <hr/> <p>->>>Gen charge time setting Setting Gen charge time of 1 start: Range:00:00~23:59 Default:00:00~00:00</p>  <p>Setting Gen charge time of 1 end: Range:00:00~23:59 Default:00:00~00:00</p>  <p>Similar to set time 2</p> 
-----------	---------------------------------	---
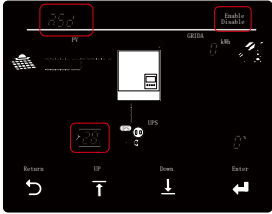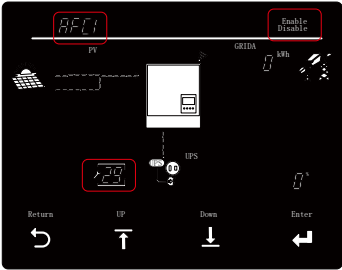
<p>28</p>	<p>PV Isolation Protection enable/disable</p>	
<p>Rapid Shutdown Function Setting Range: 1.Enable (default) 2.Disable</p>		<p>Enable</p> <p>Disable</p>
<p>29</p>	<p>AFCI Protection enable/disable</p>	
<p>AFCI Protection ->Enable/Disable Setting Range: 1.Enable (default) 2.Disable</p>		<p>Enable</p> <p>Disable</p> <p>-->Clear AFCI Fault: Setting Range: Enable</p> 
<p>30</p>	<p>GEN BOOST enable/disable</p>	
<p>GEN BOOST ->Enable/Disable Setting Range: 1. Disable (default) 2. Enable</p>		<p>Enable</p> <p>Disable</p>

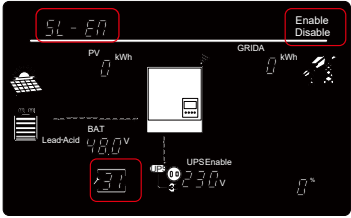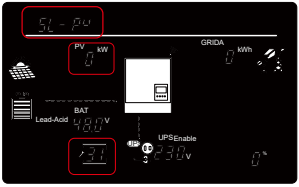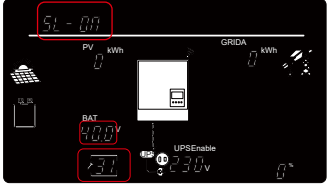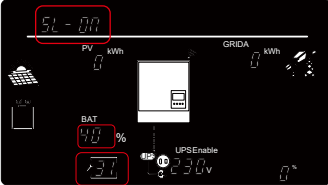

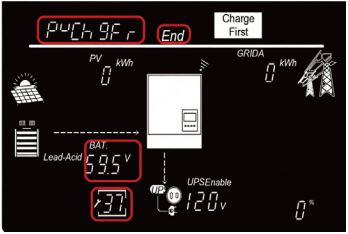

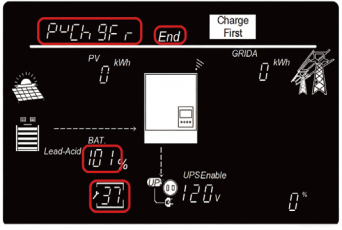

<p>31</p> <p>Smart Load Enable/Disable</p>		
	<p>Smart Load ->Enable/Disable Setting Range: 1. Disable (default) 2. Enable</p>	<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid red; border-radius: 10px; padding: 5px 15px; background-color: black; color: white;">Enable</div> <div style="border: 1px solid red; border-radius: 10px; padding: 5px 15px; background-color: black; color: white;">Disable</div> </div>
	<p>->>Smart Load GridOn Setting Range: 1. Disable (default) 2. Enable</p>	<div style="display: flex; justify-content: space-between; align-items: center;"> <div style="border: 1px solid red; border-radius: 10px; padding: 5px 15px; background-color: black; color: white;">SL-0212</div> <div style="border: 1px solid red; border-radius: 10px; padding: 5px 10px; background-color: black; color: white;">Enable Disable</div> </div>
	<p>->>>Smart Load PV Power Setting Range: 0~25.5kW; (0.5kW default)</p>	
	<p>->>>>Smart Load On Volt/Soc Setting Range: VOL: 40~59V; (54V default) SOC: 0~100%; (90% default)</p>	<div style="display: flex; flex-direction: column; align-items: center;">   </div>

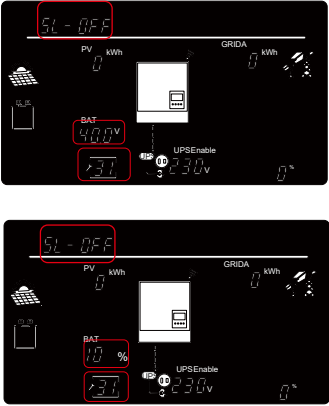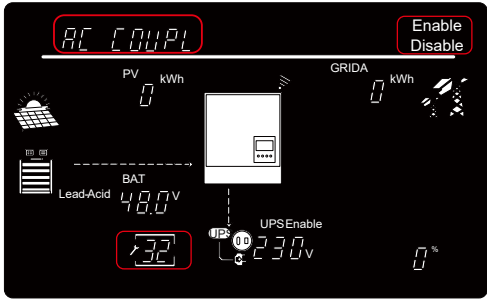		<p>-->>>>Smart Load Off Volt/Soc Setting Range: VOL: 40~59V; (48V default) SOC: 0~100%; (60% default)</p> 
<p>32</p>	<p>AC Couple Enable/Disable</p>	 <p>AC Couple ->Enable/Disable Setting Range: 1. Disable (default) 2. Enable</p> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div data-bbox="631 1267 752 1326" style="border: 2px solid red; border-radius: 10px; padding: 5px; text-align: center;">Enable</div> <div data-bbox="842 1267 963 1326" style="border: 2px solid red; border-radius: 10px; padding: 5px; text-align: center;">Disable</div> </div>

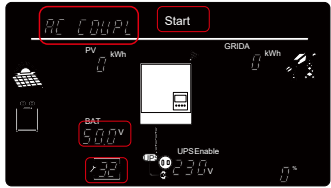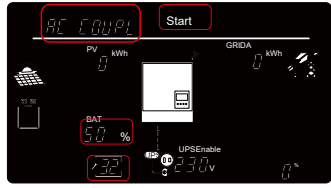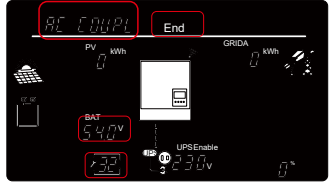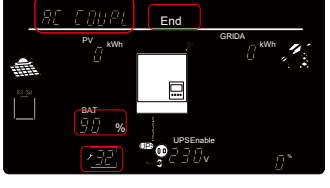		<p>->>AC couple Start Volt/Soc Setting Range: VOL: 40~59V; (50V default) SOC: 0~101%; (50% default)</p>  
		<p>->>> AC couple End Volt/Soc Setting Range: VOL: 40~59V; (54V default) SOC: 0~101%; (90% default)</p>  
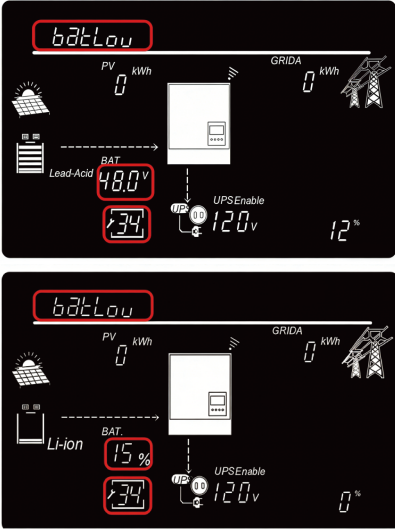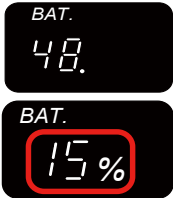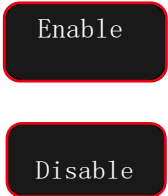
<p>34</p>	<p>Bat Warning Value Setting Volt/SOC</p>		
		<p>->Setting range: VOL: CutOff Volt-56.0V Default: 44V SOC: CutOff SOC-100% Default: 20%</p>	
		<p>->>Bat low Buzzer Enable: When enabled, the battery low warning will trigger the buzzer.</p>	

<p>35</p>	<p>Power input limit of the power grid</p>	<div data-bbox="404 220 941 529" data-label="Image"> </div> <div data-bbox="352 683 588 842" data-label="Text"> <p>->Setting range: 1~999 (unit: 0.1Kw) Default: 3K Power level: 4.8Kw 5K Power level: 8.0Kw other Power levels: 9.0Kw Parallel mode: 999Kw</p> </div> <div data-bbox="703 724 964 874" data-label="Image"> </div>
<p>36</p>	<p>System stop Charge Volt/SOC</p>	<div data-bbox="367 1066 773 1294" data-label="Image"> </div> <div data-bbox="375 1337 565 1428" data-label="Text"> <p>->Setting Volt value range: 40.0-59.5Vdc Default: 59.5V</p> </div> <div data-bbox="754 1331 919 1428" data-label="Image"> </div>

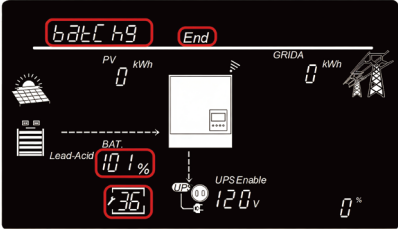		
		<p>->>Setting SOC value range: 10%-101% Default: 101%</p> 
<p>37</p> <p>PV charge first limited Volt/SOC</p>		
		<p>->>Setting range: 40.0-59.5Vdc Default: 59.5V</p> 
		
	<p>->>Setting range: 10%-101% Default: 101%</p> 	

5. Monitor System for Off-grid inverter

- Users can use wifi dongle /WLAN dongle/4G dongle (Available from 2021 March for some countries) to monitor the energy storage system, The monitor website is: server. luxpow-ertek.com

The APP is also available in the google play and apple APP store (Scan two code bar to

- download the APP).

Please download the introduction of guidance by website: <https://www.uxpowertek.com/download/>

Document Reference:

1. Wifi Quick Guidance

Quick guidance for setting password for wifi module, the paper is also available in thewifi box


2. Monitor system setup for Distributors and Monitor system setup for endusers, Monitor system registration, wifi password setting, and wifi local monitor and setting

3. Lux_Monitor_UI_Introduction

Introduction of monitor interface

4. Website Setting Guidance

Introduction of website settings for off-grid inverter

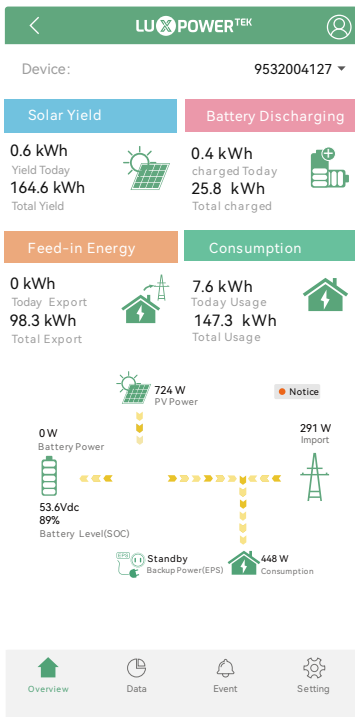

6. Specifications

Table 1 MPPT Mode Specifications	
INVERTER MODEL	SNA-US 6000
Max. PV Array Power (W)	8000 (4000/4000)
Rated PV Input Voltage (V)	320V
Number of Independent MPPT Inputs	2
PV Input Voltage Range (V)	100V~480V
MPPT Voltage Range (V)	120V~385V
Start-up Voltage (V)	100V
Max. PV Input Current per MPPT (A)	17A/17A
Max. PV Short-circuit Current per MPPT (A)	25A/25A
Max. PV Charging Current (A)	125A
Table 2 Battery Mode Specifications	
Rated Output Power	3000W(P-N), 6000W(P-N)
Max. Half Wave Load	2300W(P-N)
Output Voltage Waveform	Pure sine wave
Output Voltage Regulation	110Vac/120Vac \pm 5%(P-N) 220Vac/240Vac \pm 5%(P-P)
Rated Output Current	28A@220V; 25A@240V
Output Frequency	50Hz/60Hz
Max.Charging/Discharging Current	125A/140A
Max.Charging/Discharging Power	6000W
Recommend Capacity of Battery per Inverter	>200AH
Peak Efficiency	93%
Overload Protection	5s@ \geq 150load (P-N, P-P) 10s@110% ~150% load (P-N, P-P)
Surge Capacity	2* rated power within 5 seconds
Battery Voltage Range	46.4Vdc-60Vdc(Li)38.4Vdc-60Vdc(Lead_Acid)
High DC Cut-off Voltage	59Vdc(Li) 60Vdc(Lead_Acid)
High DC Recovery Voltage	57.4Vdc(Li) 58Vdc(Lead_Acid)

Low DC Warning Voltage (Lead Acid)	load < 20%	44.0Vdc (Settable)
	20% ≤ load < 50%	Warning Voltage @load<20% -1.2V
	load ≥ 50%	Warning Voltage @load<20% -3.6V
Low DC Warning Return Voltage		Low DC Warning Voltage@Different load +2V
Low DC Cut-off Voltage (Lead Acid)	load < 20%	42.0Vdc (Settable)
	20% ≤ load < 50%	Cut-off Voltage @load < 20% -1.2V
	load ≥ 50%	Cut-off Voltage @load < 20% -3.6V
Low DC Cut-off Return Voltage (Lead Acid)	Cut-off Voltage @load<20%≥45V	Low DC Cut-off Voltage @load<20%+3V
	Cut-off Voltage @load<20%<45V	48V
Low DC Warning SOC		20% SOC (Settable)
Low DC Warning Return SOC		Low DC Warning SOC +10%
Low DC Cut-off SOC	15% SOC (Grid on) (settable)	
	15% SOC (Grid off) (settable)	
Low DC Cut-off Return SOC		Low DC Cut-off SOC +10%
Charge Cut-off Voltage		58.4Vdc
No Load Power Consumption		<60W
Lead_Acid Battery Charging Algorithm		3-Step
Bulk Charging Voltage	Flooded Battery	58.4Vdc
	AGM / Gel Battery	56.4Vdc
Floating Charging Voltage		54Vdc
<p>Charging Curve</p>		

Table 3 AC Mode Specifications	
Nominal Input Voltage	110Vac(P-N), 220Vac(P-P); 120Vac(P-N), 240Vac(P-P)
AC Start-up Voltage	45Vac (P-N), 90Vac (P-P)
Acceptable Input Voltage Range	110Vac(P-N), 220Vac(P-P); 120Vac(P-N), 240Vac(P-P)
High Loss Voltage	140Vac (P-N)/ 280Vac (P-P)
Max.AC Input Current	41A@220V; 37.5A@240V
Max.AC Input Power	9000W
Max.AC Charging Current	125A
Nominal Input Frequency	50Hz/60Hz (Auto detection)
Rated AC Current of Bypass Relays	60A
Output Short Circuit Protection	Software Protect when GridOff Discharge Circuit Breaker Protect when GridOn Bypass
Transfer Time	<15ms @ Single<30ms @ Parallel
Output power derating: When AC input voltage drops to 200V, the output power will be derated.	Max inv current: 30A Max inv power: 6kW
Table 4 Generator Mode Specifications	
Rated GEN Voltage	110Vac (P-N)/220Vac (P-P); 120Vac (P-N)/240Vac (P-P)
Rated GEN Frequency	50Hz/60Hz
Rated GEN Input Current	33.5A @220V; 30.5A @240V
Rated GEN Input Power	7370W
Rated GEN Current of Bypass Relays	60A

Table 5 Protection/General Specifications	
INVERTER MODEL	SNA-US 6000
Over Current/Voltage Protection	YES
Grid Monitoring	YES
AC Surge Protection Type III	YES
AC Switch (Current/Voltage)	50A/230VAC
UPS Switch (Current/Voltage)	50A/230VAC
Battery Switch (Current/Voltage)	200A/80VDC
GEN Switch (Current/Voltage)	50A/230VAC
Safety Certification	UL 1741, FCC
Ingress Protection Rating	IP 20
Display & Communication Interface	LCD+LED, RS485/Wi-Fi/CAN
Warranty	2 Years
Cooling Method	FAN
Topology	Transformer-less
Noise Emission (typical)	<50dB
Operating Temperature Range	0°C to 45°C (32°F~113°F) (full load)
Storage temperature	-15°C~60°C (5°F~140°F)
Humidity	5% to 95% Relative Humidity (Non-condensing)
Altitude	<2000m (6561ft)
Dimension (D*W*H)	650*450*150mm (25.59*17.72*5.9inch)
Net Weight	24Kg (52.9lb)

***115A@ 48VDC (AC), 125A@44VDC (AC), 125A@ 48VDC (PV)

7. Trouble shooting & Error List

The failures mainly divided into 5 categories, for each category, the behavior is different:

Code	Description	Trouble shooting
E000	Internal communication fault1	Restart inverter, if the error still exist, contact us (DSP&M3)
E002	Bat On Mos Fail	Restart inverter, if the error still exist, contact us
E003	CT Fail	
E008	CAN communication error in Parallel System	Check CAN cable connection is connected to the right COM port
E009	No master in parallel system	Check parallel setting for master/Slave part, there should be one master in the system
E012	UPS output short circuit	Check if the load is short circuit, try to turn off the load and restart inverter
E013	UPS reserve current	Restart inverter, if the error still exist, contact us
E015	Phase Error in three phase parallel system	Check if the AC connection is right for three phase system, there should one at least one inverter in each phase
E016	Relay fault	Restart inverter, if the error still exist, contact us
E017	Internal communication fault2	Restart inverter, if the error still exist, contact us (DSP&M8)
E018	Internal communication fault3	Restart inverter, if the error still exist, contact us (DSP&M3)
E019	Bus voltage high	Check if PV input voltage is higher than 480V
E020	EPS connection fault	Check if EPS and AC connection is in wrong terminal
E021	PV voltage high	Check PV input connection and if PV input voltage is higher than 480V
E022	Over current internal	Restart inverter, if the error still exist, contact us
E024	PV short	Check PV connection
E025	Temperature over range	The internal temperature of inverter is too high, turn off the inverter for 10 minutes, restart the inverter, if the error still exist, contact us
E026	Internal Fault	Restart inverter, if the error still existcontact us (Bus sample)
E028	Sync signal lost in parallel system	Check CAN cable connection is connected to the right COM port
E029	Sync triger signal lost in parallel system	
E031	Internal communication fault 4	Restart inverter, if the error still exist, contact us (DSP&M8)

Code	Description	Trouble shooting
W000	Communication failure with battery	Check if you have choose the right battery brand and communication cable is right, if the warning still exist, contact us
W002	AFCI Com failure	Restart inverter, if the error persists, contact your supplier.
W003	Communication failure with meter	Check communication cable, if the warning still exist, contact us
W004	Battery failure	Inverter get battery fault info from battery BMS, restart battery, if the warning still exist, contact us or battery manufacture
W006	RSD Active	Check if the RSD switch is pressed.
W008	Software mismatch	Please contact Luxpower for firmware update
W009	Fan Stuck	Check if the fan is OK
W012	Bat On Mos	Restart inverter, if the error still exist, contact us
W013	Over temperature	The temperature is a little bit high inside inverter
W015	Bat Reverse	Check the battery connection with inverter is right, if the warning still exist, contact us
W018	AC Frequency out of range	Check AC frequency is in range
W019	AC inconsistent in parallel system 2	Reconnect the AC input or Restart inverter, if the error still exist, contact us
W020	PV Isolation low	Restart inverter, if the error still exist, contact us
W025	Battery voltage high	Check if battery voltage is in normal range
W026	Battery voltage low	Check if battery voltage is in normal range, need to charge the battery if battery voltage is low
W027	Battery open	Check if there is output from the battery and battery connection with inverter is OK
W028	EPS Over load	Check if EPS load is too high
W029	EPS voltage high	Restart inverter, if the error still exist, contact us
W031	EPS DCV high	Restart inverter, if the error still exist, contact us

■ YOUR RELIABLE ENERGY SOLUTIONS PARTNER



Lux Power Technology Co., Ltd
Headquarter: +86 755 8520 9056
www.luxpowertek.com
Contact us: info@luxpowertek.com



092.20012AD