

WLAN Dongle Connect




1. Open the box, check the two parts, WLAN dongle and gland connector.




2. Disassemble the gland connector.



3. Put the top block away.

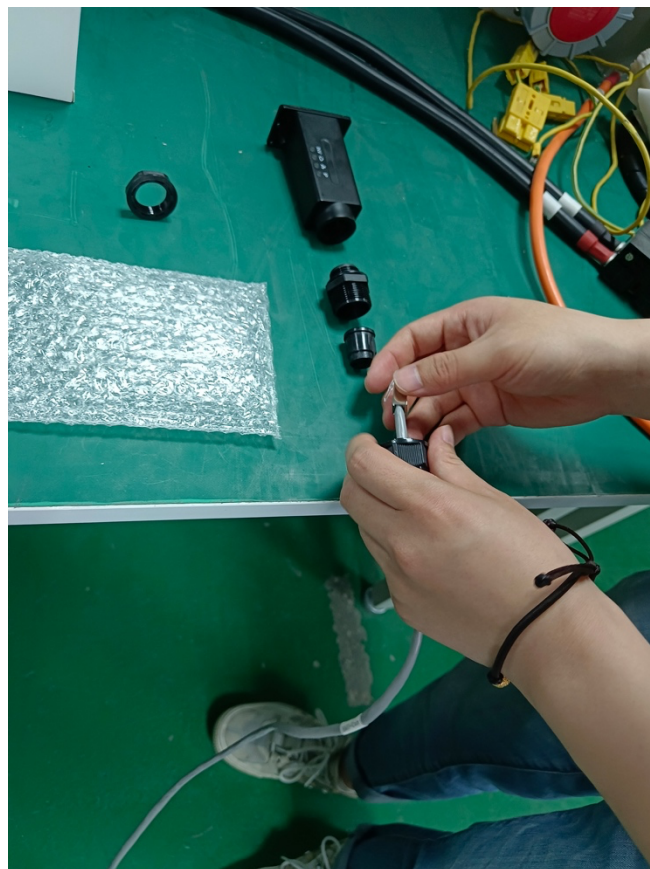

4. Get the ethernet cable through the gland connectors one by one.

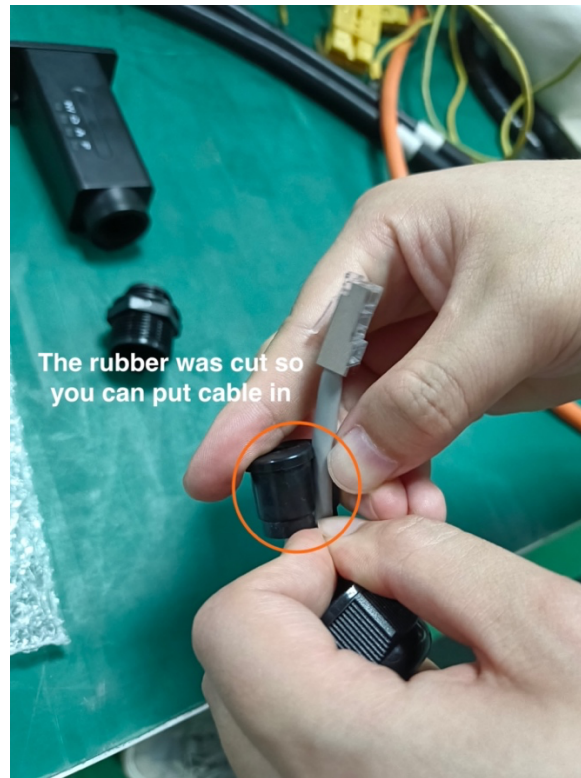

5. The rubber was cut so you can put the cable in.



6. Plug the RJ45 head(crystal head) into WLAN dongle once all 4 gland connectors were installed through.



7. Tighten the gland connectors, then you are all set.
8. Plug the WLAN dongle into inverter and use screws(included in inverter carton) to fix it.